


Baseus

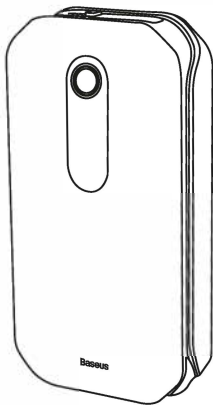

User Manual

Baseus Super Energy Air Car Jump Starter

Please read this user manual carefully before use and keep for future reference.

SAFETY INSTRUCTIONS

***Improper use of the product can easily cause damage to the product or may endanger personal and property safety.**

- (1) Ensure that the EC5 plug is fully inserted into the jump starter port before using. Please do not use when remaining power is less than 50% or the power supply is hot.
- (2) Do not use the jump starter to continuously start the car at a high frequency. The interval between two ignitions must be greater than 30s.
- (3) After connecting the smart ignition clip to the jump starter, please start the car immediately. If the car will not start, check whether the smart ignition clip is connected firmly. Also check whether there is rust or dirt on the surface of the battery interface. Start the car after cleaning the surface of the battery terminals. If the car cannot start after three consecutive attempts, please stop jumping the battery.
- (4) Avoid using electrical appliances or loads that exceed the output current of this product. Do not store in an environment with high temperature, strong light and strong magnetic fields. Keep it dry and away from water. Do not place the product in other harsh environments such as close to heat and fire.
- (5) Consumer shall be liable for any personal and property damage resulted from their improper use against the user manual or ignoring the warning, to which our company will not bear any legal liability.

PRODUCT PARAMETERS

Name: Baseus Super Energy Air Car Jump Starter

Model: BS-CH001

Capacity: 10000 mAh/3.7 V/37 Wh

Type-C input: 5 V/2.4 A (Max)

USB output: 5 V/2.4 (Max)

Starting voltage: 12 V

Starting current: 500 A

Applicable model: Petrol cars with a displacement of below 4.0L or diesel cars with a displacement of below 2.5L (car battery: 12 V)

PACKING LIST



Jump starter *1



User manual *1



Warranty card *1




Smart ignition clip *1



Cable *1

SCHEMATIC DIAGRAM

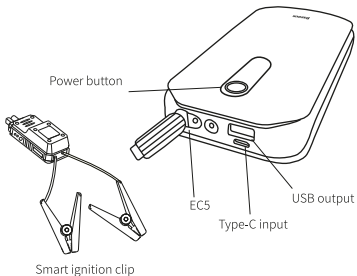

Power display: Press the power button to check remaining power. One bar on the indicator is 25% and four bars are 100% power.

OPERATION STEPS

1. Insert the smart ignition clip into the EC5 port of the jump starter. The indicator of the smart ignition clip blinks red and green alternately.
2. Clip the smart ignition clip to the car battery (the positive terminal of the smart ignition clip corresponds to the positive terminal of the car battery. The negative terminal of the smart ignition clip corresponds to the negative terminal of the car battery).
3. When the green LED indicator of the smart ignition clip is steady on, the car can be started.

***Note:**

1. Do not start the car continuously. The start interval should not exceed 5s, and the second start needs an interval of longer than 30s.
2. To protect the battery, remove the jump starter immediately after starting the car.

LAMP DESCRIPTION

1. Press and hold the power button for 3s to turn on or off the flashlight function.
2. When the flashlight is on, press the power button to switch between steady on, SOS, and blinking modes.



Manufacturer: Shenzhen Times Innovation Technology Co., Ltd.
Add: 5th Floor, Building B, Baseus Intelligence Park, No.2008, Xuegang Rd,
Gangtou Community, Bantian Street, Longgang District, Shenzhen
Executive Standard: Q/SSCZ 007-2019
Hotline: +86-4000-712-711 Website: www.baseus.com

Designed by Baseus
Made in China

PB3299Z_P0A1