 
 
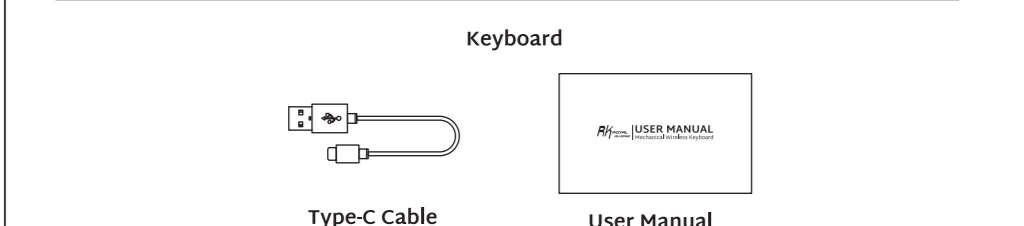 


PRODUCT BASIC

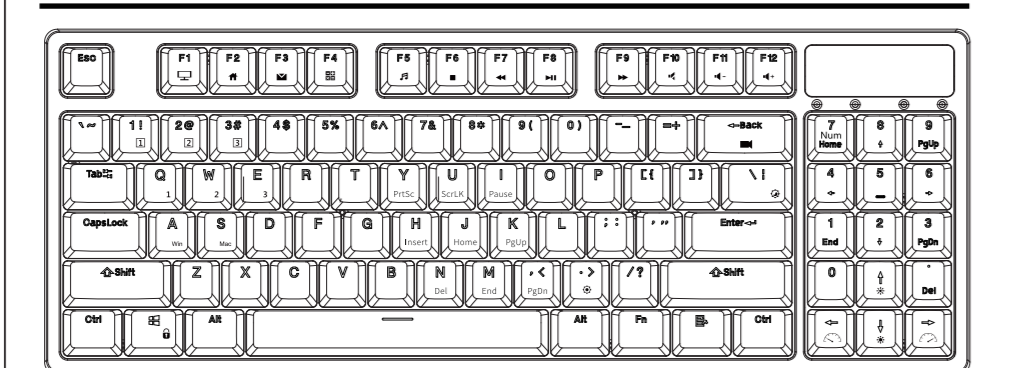 


WIRED MODE & INDICATOR FUNCTION

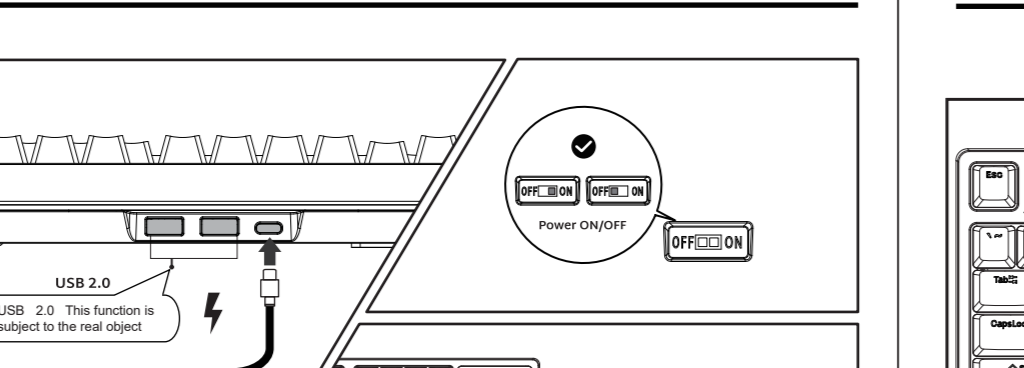

- left to right**
- Fn+Num
 - Gaps
 - Fn+In Lock
 - Breathing state means charging
 - Fast flashing state means low battery
 - Steady light state means full charge

BATTERY REMINDER

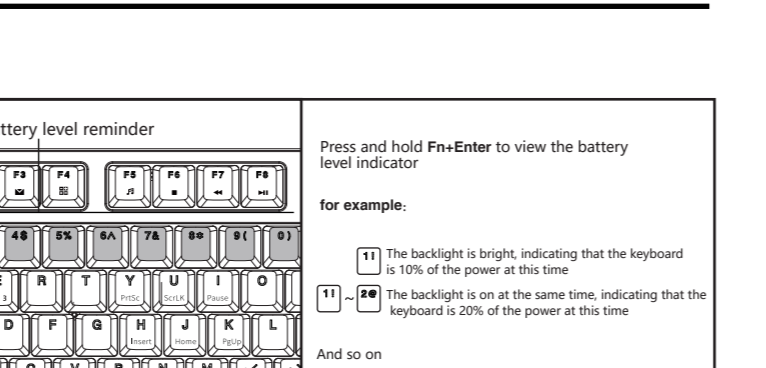


Press and hold **Fn+Enter** to view the battery level indicator

for example:

- 1 The backlight is bright, indicating that the keyboard is 10% of the power at this time
- 2 The backlight is on at the same time, indicating that the keyboard is 20% of the power at this time
- 3 The backlight is on at the same time, indicating that the keyboard power is 100% at this time


And so on

 HOW TO USE

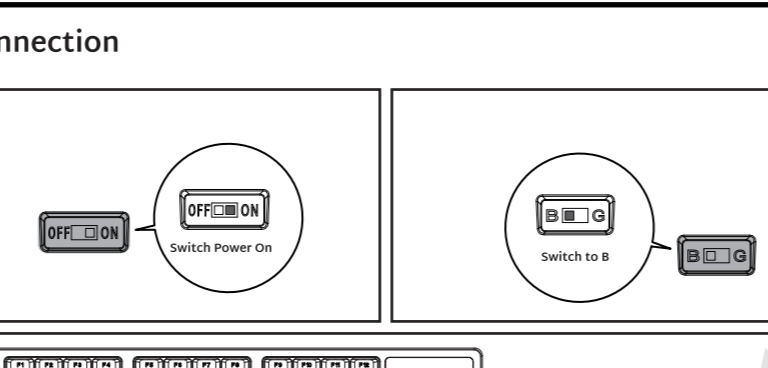


- BT Connection**
- SHORT PRESS**
Fn+Q/W/E/ to BT Channel
 - LONG PRESS**
Fn+Q/W/E/ Entry Pairing Mode

 HOW TO USE

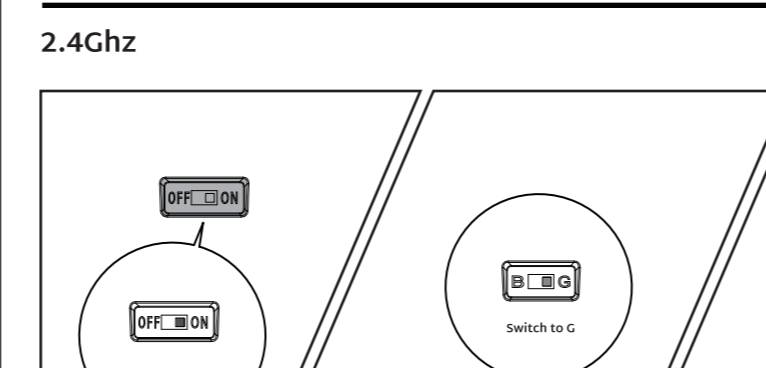


2.4Ghz

 BACKLIGHT CONTROL

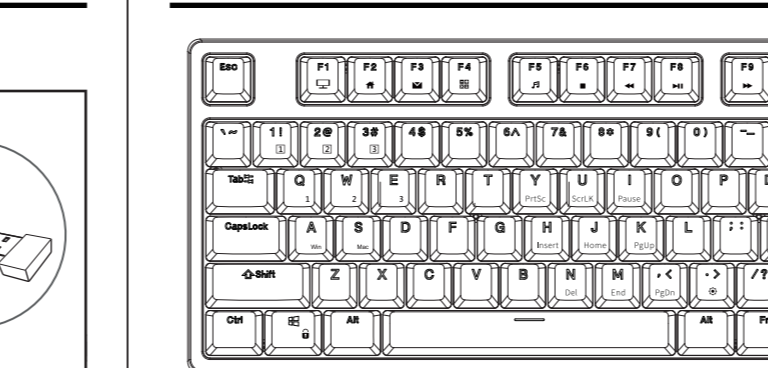


- Fn + **↑** Switch Backlight Mode
- Fn + **+** Backlight Brightness +
- Fn + **-** Backlight Brightness -
- Fn + **⏻** Windows Lock
- Fn + **↻** (The same applies to RGB) Monochrome switching
- Fn + **⏸** Backlight Speed +
- Fn + **⏪** Backlight Speed -
- Fn + **↺** Restore to factory settings

 COUSTOM BACKLIGHT SET

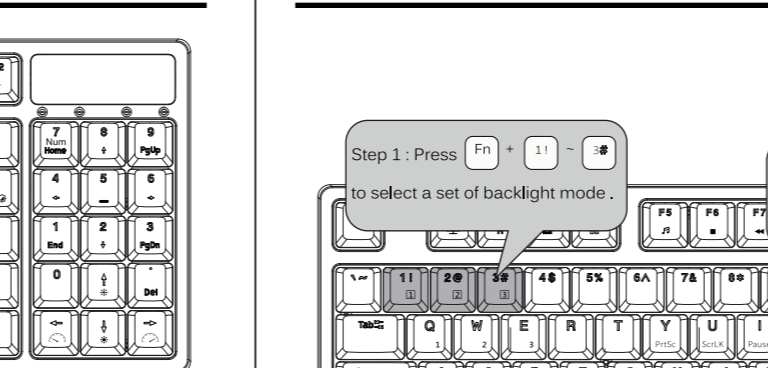


- Press **Fn + 1** to select a set of backlight mode.
- Press **Fn + Back** to enter the custom backlight settings (when the indicator lights start to blink).
- Press the keys that needs to set the backlight, repeat this step, and complete other key backlight settings.
- Press **Fn + Back** again to save and exit.

 MULTIMEDIA KEY FOR WINDOWS

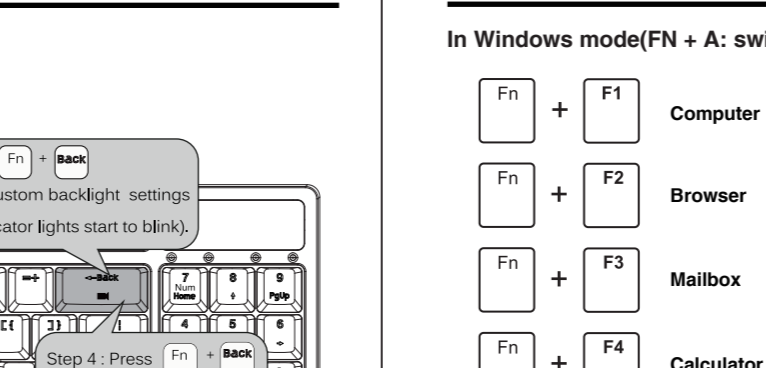


- In Windows mode(FN + A: switch to Windows system)**
- Fn + **F1** Computer
 - Fn + **F2** Browser
 - Fn + **F3** Mailbox
 - Fn + **F4** Calculator
 - Fn + **F5** Player
 - Fn + **F6** Stop
 - Fn + **F7** Last song
 - Fn + **F8** Play / pause
 - Fn + **F9** Next song
 - Fn + **F10** Mute
 - Fn + **F11** Volume-
 - Fn + **F12** Volume+

 MULTIMEDIA KEY FOR MAC

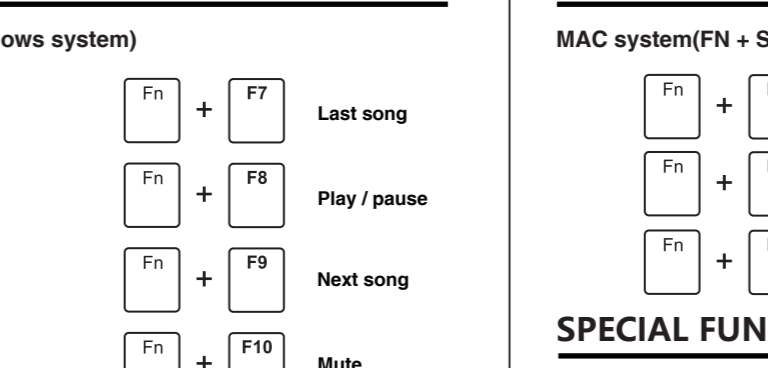

- MAC system(FN + S: switch to MAC system)**
- Fn + **F7** Last song
 - Fn + **F8** Play / pause
 - Fn + **F9** Next song
 - Fn + **F10** Mute
 - Fn + **F11** Volume-
 - Fn + **F12** Volume+

 SPECIAL FUNCTION KEYS

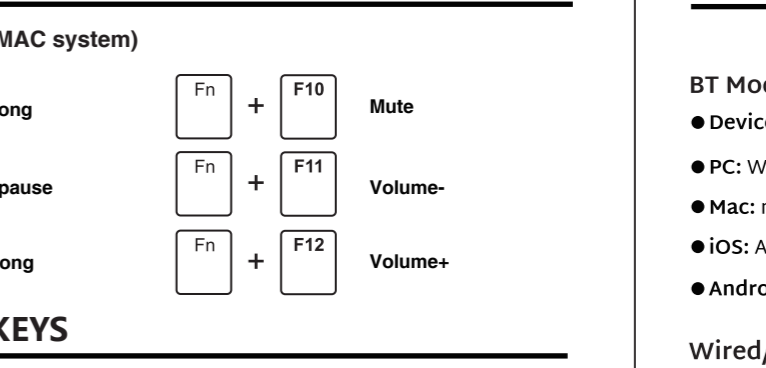

- Fn + **Y** PrtSc
- Fn + **U** ScrLK
- Fn + **I** Pause
- Fn + **K** PgUp
- Fn + **N** Del
- Fn + **M** End
- Fn + **H** Insert
- Fn + **J** Home
- Fn + **<** PgDn

SYSTEM REQUIREMENTS

- BT Mode**
- Device With Bluetooth 5.1 or later
 - PC: Windows 7 or Later
 - Mac: macOS X 10.6 Snow Leopard or Later
 - iOS: All iPads/iPhone 5 or Later
 - Android: 5.0 Lollipop or Later
- Wired/2.4Ghz Mode**
- Computer With Available USB port
 - PC: Windows 7 or Later
 - Mac: macOS X 10.6 Snow Leopard or Later

Have an issue with one of our RK products?
Feel free to contact us with any product issues or questions. We will reply as quickly as possible to ensure all your needs are handled. Please contact the seller

