

The logo for Deerma, featuring the brand name in a lowercase, sans-serif font. The letter 'e' is stylized with a yellow dot, and the letter 'a' has a yellow dot and a grey arrow-like shape pointing upwards and to the right.


Deerma Electric Kettle

Healthy boiling water for the whole family to drink

High-power heating, fast boiling does not need to wait for a long time.
The body of high borosilicate glass is safe and resistant to high temperature,
and there is no peculiar smell when boiling water with it.

DEM-SH30W

Product Structure

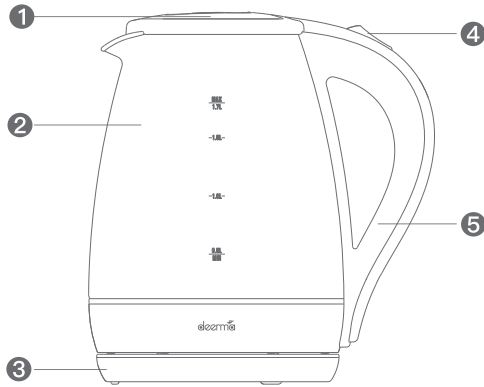

- ① Top lid ② Glass Body ③ Power Base
④ On/Off Button ⑤ Handle

Product Parameters

Product name: Electric Kettle
Product model: DEM-SH30W
Rated voltage: 220-240V~
Rated frequency: 50-60Hz
Rated power: 1850-2200W
Rated capacity: 1.7L
Net/gross weight: 0.94kg/1.3kg
Product size: 215*160*232mm
Packing size: 235*190*280mm

General safety instructions

1. Read all instructions before using.
2. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home. If this is not the case, contact your dealer and do not use the kettle.
3. The attached base can not be used for other than intended use.
4. Do not operate the appliance without load to avoid damaging the heat elements.
5. Unplug from the outlet when not in use.
6. Do not let the cord hang over edge of table counter or touch hot surface.
7. Do not place on or near a hot gas or electric burner or in a heated oven.
8. Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.
9. Ensure that kettle is used on a firm and flat surface where the children can't touch, this can prevent from overturning the kettle to damage the person or kettle.
10. To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
11. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
12. Be careful when opening the lid for refilling when the kettle is hot.
13. Close supervision is necessary when any appliance is used by or near children.
14. Do not touch the hot surface. Use the handle or the button.
15. Extreme caution must be used when moving an appliance containing hot water.
16. The appliance is not a toy. Do not let the children play it.
17. The use of attachments that are not recommended by the appliance manufacturer may result in fire, electric shock or personal injury.
18. While boiling water, avoid to contact with steam from the spout when water is boiling or just after it has switched off. Do not be anxious to uncover the lid.
19. Unplug from outlet when not in use and before cleaning; Allow it to cool before putting on or taking off parts and before cleaning the appliance.
20. Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the brewing cycles.
21. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

22. Do not use the appliance for other than intended use.
23. The kettle can only use with the stand provided.
24. If the kettle is overfilled, boiling water may be ejected.
25. Do not use the kettle outdoors.
26. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
27. Children should be supervised to ensure that they do not play with the appliance.
28. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
29. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
30. Avoid spillage on the connector.
31. Be care of potential injury from misuse.
32. The heating element surface is subject to residual heat after use.
33. The metal surfaces are liable to get hot during use
34. Save these instructions.
35. This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.
36. The surface of the heating element has residual heat after use.
37. For detailed information on cleaning food contact surface, refer to the following section of the manual.
38. The surface of the heating element has residual heat after use.
39. For detailed information on cleaning food contact surfaces, refer to the following section of the manual.

CAUTION:

- **Avoid overflow on the connector.**

WARNING :

- **Don't let Children play with the probe sensor of the lid, keep it away from Children.**
- **Risk of injury if misused.**
- **Risk of injury if misused.**

Special Safety Instructions

1. The kettle must be placed on a stable, flat and dry surface.
2. Before first use fill the kettle up to the maximum level, boil the water, pour it out and rinse the kettle. Repeat the procedure several times to remove manufacturing deposits, etc.
3. The kettle turns off automatically when the water has boiled. If necessary you may turn it off using ON/OFF button(5).
4. After the water has boiled or the kettle has been switched off, wait several seconds before switching it on again.
5. If you switch the kettle on without water, the overheat protection will automatically shut the appliance off. Leave the kettle to cool down for about 15 minutes before refilling.

First Use of the Machine

Before the first time using, please boil up the water for twice without any additives.

1. Before filling with water, remove the kettle from the power base(3).
2. Open the lid and fill the kettle with water up to the desired level (between 0.5 and 1.7L).
3. Close the lid and place the kettle on the power base (3). After plugging the base into the power socket, press the ON/OFF button(5) , the light is on, which means the base is connected to the power supply, while the kettle is on the base. Then kettle start to boil water. When boiled, the kettle will turn off automatically.

NOTE! The kettle may be used only with the base attached. Do not open the lid when boiling water.

Cleaning

Before your cleaning, please unplug the electrical kettle and make sure it has been cooled down.

Never immerse any part of the cable, plug, power cord base or kettle in water or any other liquid.

Exterior of the kettle

Wipe the exterior of the kettle with a piece of damp cloth and then dry it with a piece of dry cloth.

Never use harsh chemicals or abrasive cleaning agents as these may damage the finish of your kettle.

Interior of the kettle

Over using a period of time, lime scale would be built up inside of your kettle.

To remove lime scale:

1. Half fill the kettle with water and add the juice of a lemon.
2. Boil up the water and allow it to stand for 15 minutes before discarding.
3. Repeat steps 1 and 2 several times, please use cold water only.
4. Then the lime scale inside of your electrical kettle will be cleaned up.

NOTE! Regularly remove timescale deposits from the kettle according to the instructions below. Before cleaning the kettle, unplug it and wait until it cools down.

1. Fill the kettle with water and vinegar or juice (citric acid) or use a special descaling agent available in household stores.
2. Leave the kettle for 1 hour, then boil the water.
3. Empty the kettle and rinse it thoroughly with cold water.
4. If necessary repeat the procedure 1–3 times.
5. To eliminate the smell of vinegar, boil the water several times and pour it out.
6. Wipe the interior and exterior surfaces of the kettle with a cloth.
7. Descaling protects the kettle from damages.

WARNING: Do not immerse the appliance and the base in water or any other liquids. This may cause electric shock or fire.

NOTE! Do not use wire brush or any other abrasive objects. Do not clean the kettle with strong detergents.



Environment friendly disposal

You can help protect the environment!
Please remember to respect the local regulations:

hand in the non-working electrical equipment to an appropriate waste disposal center.



Guangdong Deerma Technology Co., Ltd.

Add: No.4-1 Longhui Road, Malong Village Committee, Beijiao Town, Shunde District, Foshan City, Guangdong Province, China

Made in China