
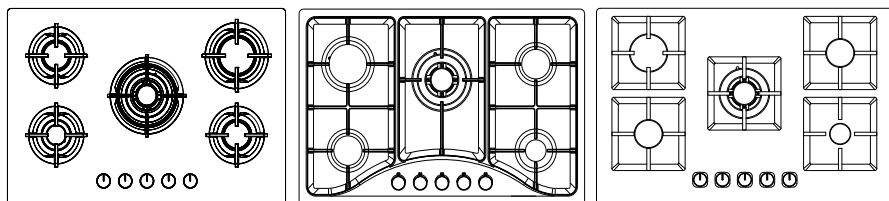
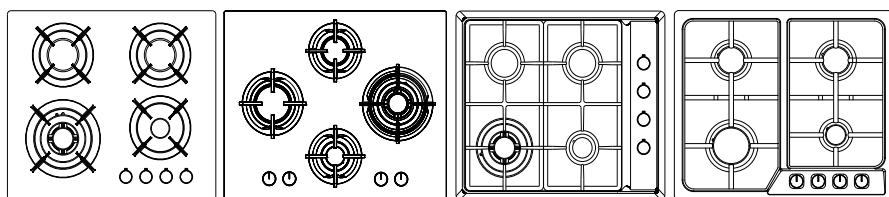


# IsEasy

## Built-in Gas Hob

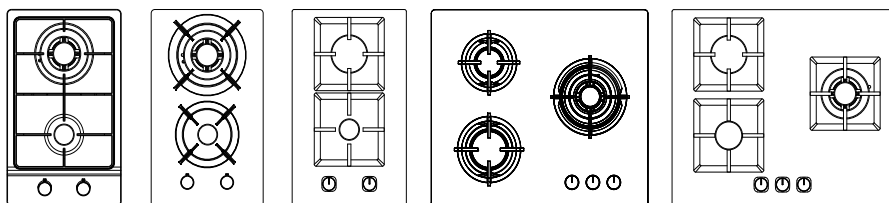

INSTRUCTION MANUAL

CE 2531

## **IMPORTANT INFORMATION**

You **MUST** read these warnings carefully before installing or using the hob.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance

## **INSTALLATION**

- Prior to installation, ensure that the local distribution conditions ( NG gas and gas pressure) and the adjustment of the appliance are compatible.
- The adjustment conditions for this appliance are stated on the label
- This appliance is not connected to a combustion products evacuation device. It shall be installed and connected in accordance with current installation regulations. Particular attention shall be given to the relevant requirements regarding ventilation.
- This appliance must be installed and serviced by a competent person
- This appliance shall be installed in accordance with the regulations in force and only used in a well ventilated space.
- Remove all packaging before using the hob.
- Ensure that the gas supply complies with the type stated on the rating label
- Do not attempt to modify the hob in any way.

### **Child Safety**

- This hob is designed to be operated by adults. Do not allow children to play near or with the hob.
- The hob gets hot when it is in use.
- Children should be kept away until it has cooled.
- Children can also injure themselves by pulling pans or pots off the hob.

### **During Use**


- This hob is intended for domestic cooking only. It is not designed for commercial or industrial purposes.
- This appliance is not connected to a combustion products evacuation device. It must be installed and connected in accordance with current installation regulations. Particular attention shall be given to the relevant requirements regarding ventilation.
- When in use a gas cooking appliance will produce heat and moisture in the room in which it has been installed. Ensure there is a continuous air supply, keeping air vents in good condition or installing a cooker hood with a venting hose.
- When using the hob for a long period of time, the ventilation should be improved, by opening a window or increasing the extractor speed.
- Do not use hob if it is in contact with water. Do not operate the hob with wet hands.
- Ensure the control knobs are in the closed position when not in use.

- When using other electrical appliances, ensure the cable does not come into contact with the hot surfaces of the cooking appliance.
- Unstable or misshapen pans should not be used on the hob as unstable pans can cause an accident by tipping or spillage.
- Never leave the hob unattended when cooking with oil and fats.
- Never use plastic or aluminum foil dishes on the hob.
- Perishable food, plastic items and aerosols may be affected by heat and should not be stored above or below the hob unit.


**Service**

- The hob should only be repaired or serviced by an authorized Service Engineer and only genuine approved spare parts should be used.

**Environmental Information**

- After installation, please dispose of the packaging with due regard to safety and the environment.
- When disposing of an old appliance, make it unusable, by cutting off the cable.
- The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

**DESCRIPTION OF HOB**

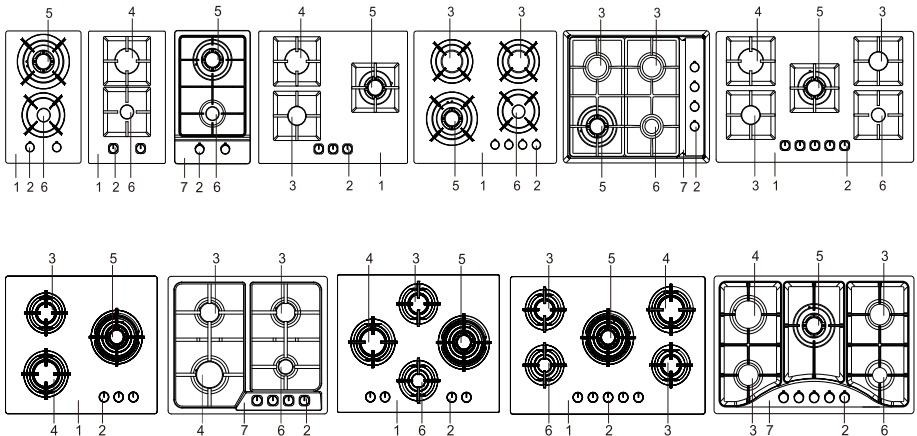

1. Tempered glass 2. Knobs 3. Semi rapid burner (1.75kw) 4. Rapid burner (2.7kw)  
 5. Triple burner (3.3kw) 6. Auxiliary burner (1.0kw) 7. Stainless steel panel

## OPERATION

**Lighting Burners** – Simply press the knob in, turn anticlockwise to maximum and the burner will ignite. Before releasing knob, ensure a flame is established, if the burner fails to ignite, put into off position and try again.


If in case of a power failure or failure of the ignition, a match or lighting device can be used. Care must be taken when using this method.

The device shall not be operated for more than 15s. If after 15s the burner has not lit, stop operating the device and open the compartment door and/ or wait at least 1 min before attempting a further ignition of the burner.

In the event of the burner flames being accidentally extinguished, turn off the burner control and do not attempt to re-ignite the burner for at least 1 min.

If you cannot light the flame even after several attempts, check the "cap" and "crown" (see below diagram) are in the correct position. To put the flame out, turn the knob to the symbol "●".

1. Burner cap
2. Burner crown
3. Burner plate
4. Ignition electrode
5. Thermocouple

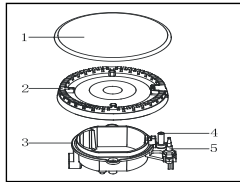


When switching on the mains, after installation or a power cut, it is quite normal for the spark generator to be activated automatically.

To ensure maximum burner efficiency, you had better use pots and pans with a flat bottom fitting the size of the burner used (see table).

Burner	Minimum Diameter	Maximum diameter
Triple Flame (Rapid)	240 mm	260 mm
Large (Rapid)	160 mm	240 mm
Medium (Semi-rapid)	120 mm	220 mm
Small (Auxiliary)	80 mm	160 mm

If you use a saucepan which is smaller than the recommended size, the flame will spread beyond the bottom of the vessel, causing the handle to overheat.

When use one pan with concave or convex bases, you can put one accessorial pan support on the pan support. And use an appreciate pan on the accessorial pan support.

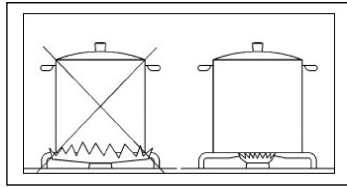

Take care when frying food in hot oil or fat, as the overheated splashes could easily ignite. Warning: The user against the use of cooking vessels on the hotplate that overlap its edges.

As soon as a liquid starts boiling, turn down the flame so that it will barely keep the liquid simmering. If the control knobs become difficult to turn, please contact your local service centre.

## **MAINTENANCE AND CLEANING**

Before any maintenance or cleaning can be carried out, you must turn off the hob.

The hob is best cleaned whilst it is still warm; as spillage can be removed more easily than if it is left to cool.

### **The Hob Panel**

Regularly wipe over the hob top using a soft cloth well wrung out in warm water to which a little washing up liquid has been added. Avoid the use of the following: - household detergent and bleaches; -impregnated pads unsuitable for non-stick saucepans; -steel wool pads; -bath/sink stain removers. For stainless steel hobs use a proprietary stainless steel cleaner.

### **Pan Supports**

The pan supports are dishwasher proof. If washing them by hand, take care when drying them as the enameling and drying process occasionally leaves rough edges. If necessary, remove stubborn stains using a paste cleaner.

### **The Burners**

The burner caps and crowns can be removed for cleaning. Wash the burner caps and crowns using hot soapy water, and remove marks with a mild paste cleaner. A well moistened soap impregnated steel wool pad can be used with caution, if the marks are particularly difficult to remove. After cleaning, be sure to wipe dry with a soft cloth.

### **Ignition electrode**

The electric ignition is obtained through a ceramic "electrode" and a metal electrode (see diagram on page 3 - number 4). Keep these components very clean, to avoid lighting difficulties, and check that the burner crown holes are not obstructed.

### **Thermocouple**

The thermocouple is very crucial for cutting gas supply in case of flame out during cooking, be sure to keep them in very clean condition.

## **TROUBLESHOOTING**

<b><u>PROBLEM</u></b>	<b><u>CORRECTIVE ACTION</u></b>
<ul style="list-style-type: none"> <li>• There is no spark when lighting the gas</li> </ul>	<ul style="list-style-type: none"> <li>• Check that the unit is plugged in and the electrical supply is switched on</li> <li>• Check that the residual current circuit breaker has not tripped (if fitted)</li> <li>• Check the mains fuse has not blown</li> <li>• Check the burner cap and crown have been replaced correctly, e.g. after cleaning.</li> </ul>
<ul style="list-style-type: none"> <li>• The gas ring burns unevenly</li> </ul>	<ul style="list-style-type: none"> <li>• Check the main jet is not blocked and the burner crown is clear of food particles.</li> <li>• Check the burner cap and crown have been replaced correctly, e.g. after cleaning.</li> </ul>

## **INSTRUCTIONS FOR THE INSTALLER**

	Product dimensions(mm)	Cut out dimensions(mm)
MGBG-312A/MGBG-312S2C	310x510x115	265x475
MGBS-312A	310x510x95	265x475
MGBS-604D	590x510x95	560x480
MGBG-604B/MGBG-603/MGBG-603S2R	600x510x115	560x480
MGBG-654A	640x520x115	560x480
MGBS-765	760x500x95	730x480
MGBG-775 /MGBG-775S2	770x510x115	730x480
MGBS-604C	585x505x95	560x480

## **TECHNICAL DATA**

### **Burner configuration**

	<b>NG I<sub>2H</sub> (20)</b>		<b>NG I<sub>2E</sub> (20)</b>		<b>LPG I<sub>3+</sub> (28~30/37)</b>		<b>LPG I<sub>3B/P</sub> (50)</b>	
	Injector Di (mm)	kW	Injector Di (mm)	kW	Injector Di (mm)	kW	Injector Di (mm)	kW
Triple burner	1.27	3.3	0.94	3.3	0.82	3.3	0.82	3.3
Rapid burner	1.13	2.7	0.83	2.7	0.74	2.7	0.74	2.7
Semi rapid burner	0.94	1.75	0.65	1.75	0.58	1.75	0.58	1.75
Auxiliary burner	0.72	1.0	0.52	1.0	0.45	1.0	0.45	1.0




## **IMPORTANT SAFETY REQUIREMENTS**

### **Provision for ventilation**

The hob should not be installed in a bed sitting room with a volume of less than  $20 \text{ m}^3$ . If it is installed in a room of volume less than  $5 \text{ m}^3$  an air vent of effective area of  $110 \text{ cm}^2$  is required. If it is installed in a room of volume between  $5 \text{ m}^3$  and  $10 \text{ m}^3$  an air vent of effective area of  $50 \text{ cm}^2$  is required, while if the volume exceeds  $11 \text{ m}^3$  no air vent is required. However, if the room has a door which opens directly to the outside no air vent is required even if the volume is between  $5 \text{ m}^3$  and  $11 \text{ m}^3$ . If there are other fuel burning appliances in the same room, B.S. 5440 Part 2 Current Edition, should be consulted to determine the requisite air vent requirements.

### **LOCATION**

The hob may be located in a kitchen, a kitchen/diner or bed sitting room, but not in a bathroom, shower room or garage. Before making the cut out in the worktop ensures that there is a minimum distance of 55 mm between the rear edge of the hob and the wall. A minimum distance of 100 mm must be left between the side edges of the hob and any adjacent cabinets or walls. The minimum distance combustible material can be fitted above the hob in line with the edges of the hob is 400 mm. If it is fitted below 400 mm a space of 50 mm must be allowed from the edges of the hob. The minimum distance combustible material can be fitted directly above the hob is 700 mm.

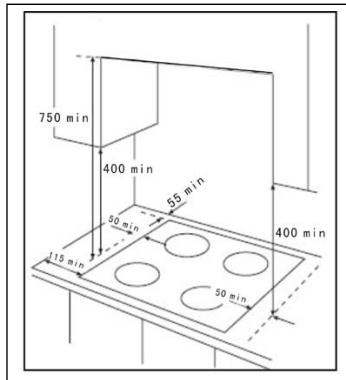

**Warning:** The use of a gas cooking appliance results in the production of heat and moisture in the room in which it is installed. Ensure that the kitchen is well ventilated: keep natural ventilation holes open or install a mechanical ventilation device.

Prolonged intensive use of the appliance may call for additional ventilation, for example opening of a window, or more effective ventilation, for example increasing the level of mechanical ventilation where present.

## INSTALLATION

**IMPORTANT:** The hob must be installed by a competent person to the relevant Gas Standards. Please, ensure that, once the hob is installed, it is easily accessible for the engineer in the event of a breakdown.


### WHEN THE HOB IS FIRST INSTALLED

Once the hob has been installed, it is important to remove any protective materials, which were put on in the factory.

Any gas installation must be carried out by a competent person. The manufacturer will not accept liability, should the above instructions or any of the other safety instructions incorporated in this book be ignored.

On the end of the shaft, which includes the GJ 1/2" threaded elbow, adjustment is fixed so that the washer is fitted between the components as shown in the diagram. Screw the parts together without using excessive force.

**Important:** It is advisable to isolate the appliance from the piece of furniture below with a separator, leaving a depression space of at least 10mm. If the hob is going to be installed on the top of an oven, precautions must be taken to guarantee an installation in accordance with current accident prevention standards. Pay particular attention to the position of the electric cable and gas pipe, they must not touch any hot parts of the oven. Moreover, if the hob is going to be installed on the top of a built in oven without forced cooling ventilation, proper air vents must be installed to guarantee adequate ventilation, with a lower air entering and a higher air exiting.

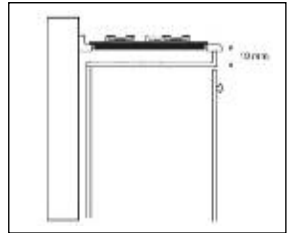


### GAS CONNECTION

Connection to the gas supply should be with either rigid or semi - rigid pipe, i.e. steel or copper. The connection should be suitable for connecting to RC 1/2 (1/2 BSP male thread). When the final connection has been made, it is essential that a thorough leak test is carried out on the hob and installation. Ensure that the main connection pipe does not exert any strain on the hob. When a flexible tube is used, keep that it cannot contact with a moveable part of the housing unit and does not pass through any space susceptible of becoming congested.

It is important to install the elbow correctly, with the shoulder on the end of the thread, fitted to the hob connecting pipe. Failure to ensure the correct assembly will cause leakage of gas.

1. Gas inlet pipe
2. Sealing gasket
3. 90 degree connection elbow
4.  $\phi 11.5$  Hose connector

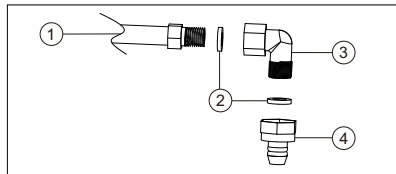



## ELECTRICAL CONNECTIONS

Any electrical work required to install this hob should be carried out by a qualified electrician or competent person

## THE HOB MUST BE EARTHED

This hob is designed to be connected to a 127-240V/50 Hz or 120V/60 Hz AC electrical supply.


Before switching on, make sure the electricity supply voltage is the same as that indicated on the hob rating label.

Ensure that the hob supply cable does not come into contact with surfaces with temperatures higher than 50 deg. C.

## FITTING THE HOB INTO THE WORKTOP

Carry out the building in of the hob as follows:

- Put the seals supplied with the hob, on the edges of the cut out taking care that the seals meet without overlapping;
- Place the hob in the cut out, taking care that it is centered
- Fix the hob with the relevant fixing clamps and screws, as shown in the diagram. When the screws have been tightened, the excess seal can be removed.

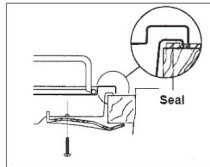

The edge of the hob forms a double seal which prevents the ingress of liquids.

## CONVERSION FROM NG TO LPG

### Important

The replacement/conversion and adjustments of the gas hob should only be undertaken by a competent person.

Your model was designed to work with N G. Please check the note on the appliance. But it can be converted from one gas category to another, make sure the injectors (provided) are fitted and the gas rate is adjusted to suit.

### Method

- Ensure that the gas taps are in the "OFF" position
- Isolate the hob from the electrical supply
- Remove all pan supports, burner caps, rings, crowns and control knobs
- With the aid of a 7mm box spanner the burner injectors can then be unscrewed and replaced by the appropriate injectors (provided).(Fig.1)

**ADJUST THE GAS PRESSURE(Only professional installation engineers are allowed to operate!)**

If after the conversion from NG to LPG the flame is down on the minimum position, adjust the gas pressure as follow : (Fig.2)

Place the knob of the defect burner on medium position so that the flame remain stable. Take out the knob, and with a very thin screw driver, turn the bypass situated in the centre tap control shaft in position maximum. Turn the knob on position minimum. The flame will be too big. Remove again the knob and reduce the pressure (turning the bypass) until convenient size of the flame. It means the flame is not going down any more but also not too big.

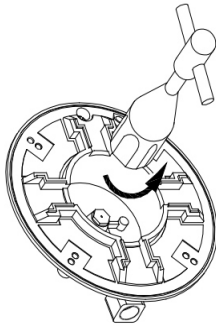


Fig.1

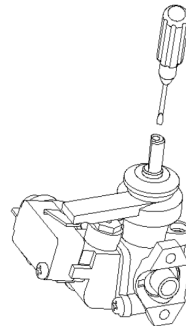


Fig.2

E-Mail: [service@iseasy.com](mailto:service@iseasy.com)  
Website: [www.iseasy.com](http://www.iseasy.com)