


deerma

deerma
德尔玛

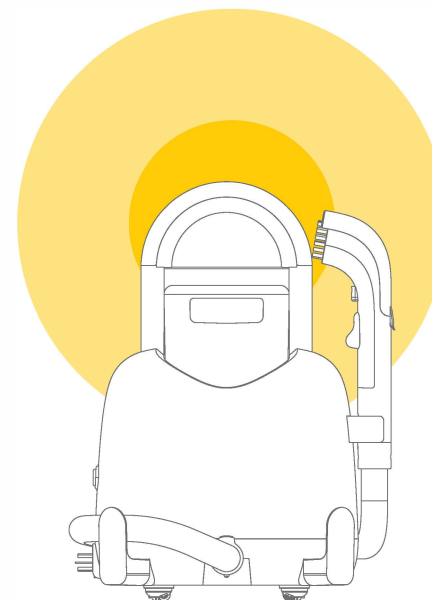

Deerma Suction Vacuum Cleaner

Multifunctional cleaning, no stains on fabric.

Dual mode cleaning with normal temperature water and hot water can disintegrate stubborn dirt. Spray / wash / suction multi-function, deep cleaning the fabric of the whole house. Large capacity double water tank to meet the use. 360° universal wheel for easy movement.

Water-suction Sweeper (Fabric Scrubber)

BY200

Guangdong Deerma Technology Co., Ltd.

Add: No.4-1 Longhui Road, Malong Village Committee, Beijiao Town,
Shunde District, Foshan City, Guangdong Province, China.
Made in China

Read instruction manual carefully before use.


In addition, this instruction can be available on the following website: <http://www.deerma.com>

Precautions

The product is a kind of electrical appliance. Please carefully read the precautions given in the Manual, and operate the product as stipulated in the Manual. Any operation in breach of the Manual may damage the product or cause the personal injury. The product is suitable for the normal household use only, and not for the industrial or outdoor use. Attention shall be paid to the followings:

1. The product is inapplicable to the people with physical, sensory or mental deficiency, the people without fundamental electricity knowledge, and the children without the supervision of any adult.
2. The product must not be immersed in water or any kind of liquid.
3. The power plug or any electric insulation of the product shall be kept away from wet fingers or other body parts, in order to avoid electric shock.
4. The power cord that is damaged must be replaced by the professional worker from the manufacturer, its maintenance department or similar department, in order to avoid hazards.
5. During use, the air lines and moveable components shall be kept away from long hairs, wide clothes, fingers and other body parts.
6. The metal wires (such as pins, thin iron wires and copper wires, etc.) must not be inserted into the slot on the product, in order to avoid electric shock.
7. The product must not be repaired or dismantled by any person except for the professional technicians of the Company.
8. When the product is not used, the power plug shall be pulled out to avoid fire or other accidents caused by electric leakage or short circuit.
9. If the product becomes abnormal during use, it is required to pull out the power plug immediately and contact the after-sales service center of the Company for solution.
10. After the product is used, the sewage tank shall be cleaned timely to keep the air lines unblocked for fear that the blockage of air line causes the decrease of suction and the overheating of motor, and thus shortens the service life of the product.
11. The product is applicable to the indoor beds, sofas and blankets only, and may not achieve the expected performance if used on other materials.
12. During use, please do not shake the product in order to prevent the sewage from entering the motor.
13. A little of water in the product, if any, is left by the product test and is normal.
14. Beware of scalding by hot water during use.
15. The hose shall be inspected periodically, and if damaged, must not be used.
16. Attention shall be paid to preventing the liquid from facing the device containing electric components, such as the oven interior.
17. The power plug shall be pulled out after the use and during the maintenance of the product.
18. The clean water tank shall be filled with pure water.
19. To wind up the power cord, it is required to power off the product first, then pull out the plug, and next wind up the power cord carefully.


Product Structure

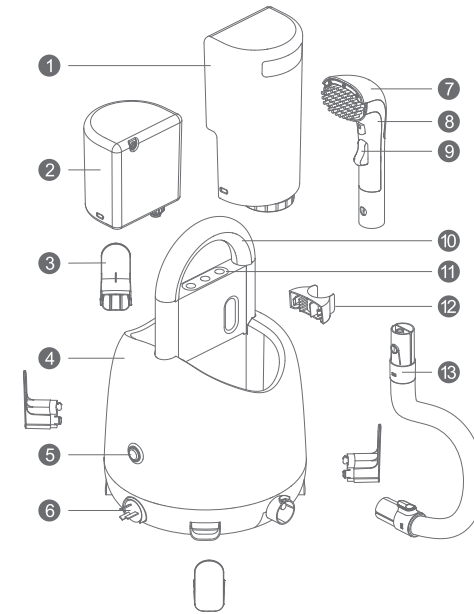

- | | | |
|---------------------|--------------------------|------------------------|
| 1 Sewage tank | 2 Clean water tank | 3 Hose fastener |
| 4 Product body | 5 Power cord winding key | 6 Power plug |
| 7 Transparent cover | 8 Brush head | 9 Water key |
| 10 Handle | 11 Key panel | 12 Brush head fastener |
| 13 Hose assembly | | |

Circuit Diagram

This diagram is for reference only, and may be updated without further notice. It shall be subject to the physical product. The final right of interpretation of the diagram is reserved by the Company.

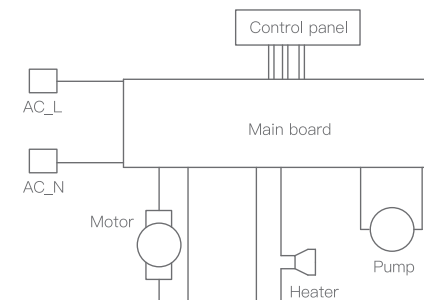

Product Parameters


Product name: Water-suction Sweeper (Fabric Scrubber)
 Rated voltage/ frequency: 220-240V~/50Hz
 Suction power: 400W
 Capacity of sewage tank: 1.400mL
 Vacuum: 11.5kPa

Model: BY200
 Input power: 850W
 Capacity of clean water tank: 1.600mL

Packing List


Items	Qty.
Main unit	1
Brush head assembly	1
Hose assembly	1
Hose fastener	4
Clean water tank assembly	1
Sewage tank assembly	1
Instruction manual	1

Operating Methods

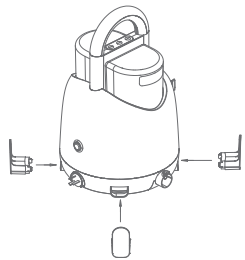

Assemble the main unit before use:

1. Open the package, take out the main unit, and insert four hose fasteners into the corresponding positions on the main unit.

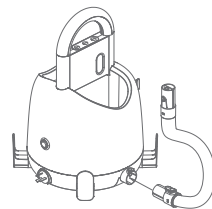


2. Insert the hose assembly into the corresponding position on the main unit, and make sure that it is not pulled out reversely.


Product Operation




3. Insert the brush head assembly into the other end of the hose assembly, and make sure that it is not pulled out reversely.

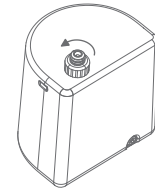


4. Open the cap of clean water tank as shown above.

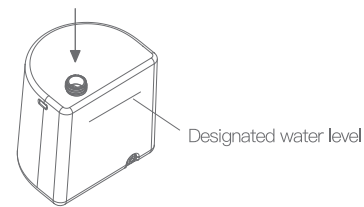

5. Fill the clean water tank with pure water, and make sure that the filled water is not above the designated water level.

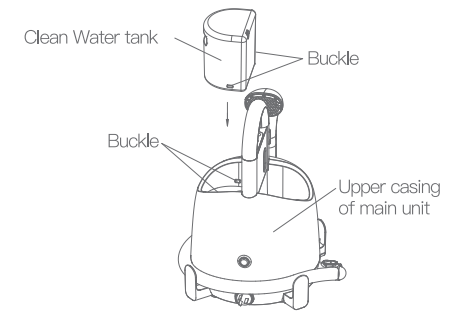

6. After water filling, tighten the cap, and place the clean water tank assembly in the upper casing of main unit as shown above.

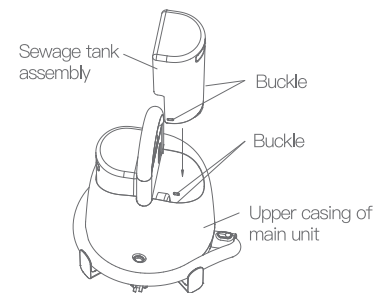

7. Put the sewage tank assembly in the upper casing of main unit as shown above.

 

Startup and operation:

8. Function descriptions

- 1) Power on the product to make it in standby.
- 2) Power on/off key: click the on/off key gently to start the dry/wet motor (low speed), pump and heater together with its indicator light on (white); click the on/off key again to stop the dry/wet motor, pump and heater with its indicator light off; and so on.
- 3) MAX key: when the product is powered on, the motor operates at a low speed and its indicator light is on (white), click this key to make the dry/wet motor running at a high speed with its indicator light on (red); and so on.
- 4) Normal/hot water switch key: when the product is powered on, the heater operates, and its indicator light is on (red), click this key to stop the heater with its indicator light on (white); and so on.

9. Startup



Make sure that both clean water tank and sewage tank are installed properly, there is water in the clean water tank, and the hose and brush head are installed properly; then, unwind the power cord, and insert the plug into the socket to make the product in standby.

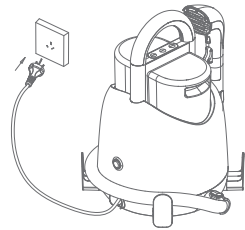

10. Operation

1) Click the power on/off key gently to initiate the working state of the product with the indicator light showing white. At this moment, the product is in the default mode, i.e. the hot water is sprayed from the nozzle, and the vacuum motor runs at a low speed.

  2) Hold the brush head with one hand, put the brush horizontally close to the surface to be cleaned, press the water key with a finger to wet the surface to be cleaned, and move the brush head back and forth repeatedly to clean the surface. When no water is needed, release the water key.



3) When the normal-temperature water is used, click the normal/hot water switch key gently, and with the indicator light showing white, press the water key to spray the normal-temperature water.



 

4) To increase the suction, the MAX key shall be clicked gently with the MAX key showing red.

5) During the operation, the hot water is sprayed when the normal/hot water switch key shows red, but the normal-temperature water is sprayed when this key shows white; the motor runs at a high speed when the MAX key shows red, but at a low speed when this key shows white. After work, gently click the power on/off key to make the product in standby. If the product is not used further, the power plug shall be pulled out.


Cleaning and Maintenance

Cleaning of internal pipes

1. Make sure that there is clean water in the clean water tank and the product is powered on; then hold the brush head with a hand, put the brush horizontally close to a clean surface or countertop, and press the water key with a finger to clean the built-in pipes of the product. In the process of cleaning, the normal-temperature or hot water and the high or low speed of motor can be switched as the normal operation, in order to achieve the better cleaning effect.

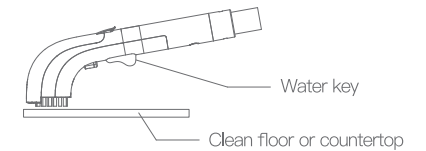

 2. If there are stains in the transparent cover of brush head, it is required to pull out the power plug first, then pull out the transparent cover as shown by the arrow, and next wash the transparent cover separately.




3. Dry the transparent cover by wiping or in air, and then install it back to the brush head.


Cleaning of sewage tank




1. Lift the sewage tank vertically out from the main unit.

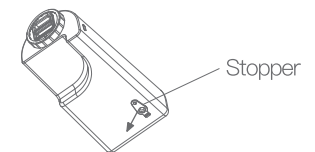


2. Unplug the stopper on the sewage tank, discharge the sewage, and then insert the stopper.

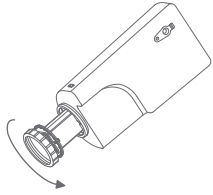


3. Open the bottom cap, take out the internal components, and wash the tank and internal components with clean water.

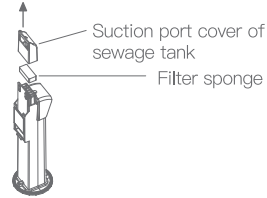

4. Pull out the suction port cover of sewage tank on the internal component as shown above, take out the filter sponge, wash and dry the filter sponge, and install back the filter sponge and the suction port cover of sewage tank.

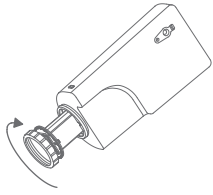


5. Dry the internal components and sewage tank by air blowing or in air, then install the internal components back in the sewage tank, and next tighten the cap.

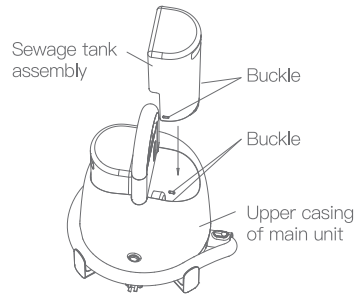


6. Put the sewage tank assembly in the upper casing of main unit as shown above.

6. The outer surface of whole product can be wiped with dry or slightly wet rag. Remember to pull out the power plug before wiping.

Storage

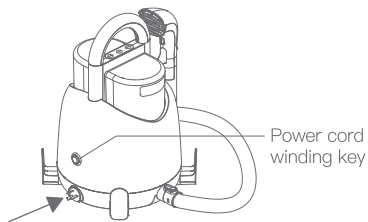

1. If the product is not used for a long period, press the power cord winding key forcefully to wind up the power cord into the product as shown above.

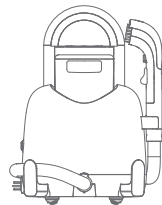

2. Place and store the hose and brush head as shown above in a well-ventilated and dry place.

Fault Analysis and Solution

⚠ Caution: It is required to disconnect the power supply and pull out the power plug before troubleshooting.

Fault	Analysis	Troubleshooting
The brush suction is weak	The sewage tank is full	Discharge the sewage in the sewage tank
	The pipe orifice is blocked	Check if the pipe orifice is blocked, and clean the pipe orifice
	The product operates for a long time	Power off the product, and cool it down for more than 10 min before reuse
No water is sprayed out from the nozzle	The clean water tank lacks water	Fill the clean water tank with water
The product does not work after a key is clicked	The power plug is not inserted into the socket	Insert the power plug into the socket
No hot water is sprayed out, and the normal/hot water switch key and the MAX key flicker show red at the same time	The NTC temperature sensor fails	Contact the customer service staff, and return the product to the factory for repair

If the fault still exists, please contact a franchised maintenance department of the Company for solution.



All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.