TELESIN


For Hero 11/10/9/8/7/6/5 Battery

Action Camera Battery Power Bank

User Guide

Product introduction

Telesin PB001 Power Bank provides the perfect outdoor charging solution for sports camera batteries. Unique camera battery slot is designed to charge 2 sports camera batteries while storing them. Built-in 10000mah high capacity battery, it can charge fully about 4 Hero 9 -11 batteries and about six Hero 5 - 8 batteries

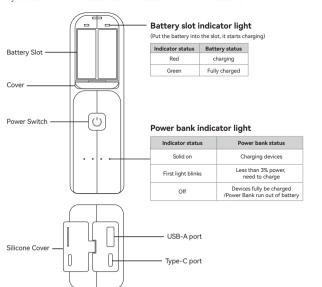

How to use

 
Charge for sports camera battery



3Step. Indictor of battery slot and power bank on, camera batterise start charging.

4Step. The battery is fully charged when the indicator is solid green.

A Note: When the battery is fully charged, and the power bank is not connected to another device, the power bank indicator will be off after 1 minute



A Charge for phones and other devices

USB-A port charging

Step 1. Use the USB cable into the power USB-A port

Step 2. Connect the device and start charging

Step 3. Once the device is fully charged, the power bank will be automatic power off within 1min.







- 1. Plug Type-C cable to the Type-C port.
- Connect a device then it starts charging.
- 3. Once the device is fully charged, the power bank will be automatic power off within 1min.











Charge for power bank

Step 1: Plug the cable into the Type-C port of the power bank Step 2: Connect the other end of the USB cable to the charger

Step 3: Power bank indicator lights up to start charging

* Recommended to use PD20W charger for fast charging, charging time is about 2.5 hours

 






About button





Power output status		Power Input status		
tric quantity	Indicator status	Electric quantity	Indicator status	
< 3%	•	< 25%	•	
3%-25%	0	25%-50%	○ •	
25%-50%	0 0	50%	○ ○ ●	
50%-75%	000	50%-75%	0000	
> 75%	0000	Fully charged	0000	

Error				
Status	Indicator status			
Over temperature protection	0 0 0 0			
The USB-A and TYPE-C ports are overflowed	• • • •			

Specification

Innut/output nower

USB-A Output V

LISR-A Support

Type-C Support

simultaneous output

Storage temperature

Camera battery slot				
Compatible battery	GoPro hero 11/10/9/8/7/6/5 battery			
Output power	4.35V/900mA(Max)*1, 4.35V/900mA(Max)*2			
Charging time	150 mins (Hero 9/10/11 batteries) 120 mins (Hero 8/7/6/5 batteries)			
Power Bank				
Model	GP-PB-001			
Compositor	10000 4 h			

Sports camera, mobile phone, TWS Bluetooth headset, audio outdoor lamp

3. USB-A port supports fast charging when using both USB-A and the camera

4. Type-C port supports fast charging when using both Type-C and camera

5. When using USB-A and Type-C at the same time, the power bank does not

have fast charging function, A/C port can only be charged normally.

Support USB-A/Type-C/battery charging slot can be used simultaneously

Support, automatic power-off within 1 minute after the device is fully charged

1. Fast charging 20W(max) with USB-A only. 2. Fast charging 20W(max) when using Type-C only.

5V/3A. 9V/2.22A. 12V/1.67A

5V/3A 9V/2.22A 12V/1.67A

PD/OC2 0/OC3 0/FCP/AFC

2.5hrs (20W fast charging input)

OC3 0/FCP/AFC

Disclaimer

Attentions

nower supply equipment

the nower bank and reduce its life

nower hank and nose an unsafe risk

9 Do not throw the nower bank into the fire

4 It is normal for the power bank to become hot during or just after use.

8 Do not squeeze the power bank with spiky metal or heavy objects

10. Do not put the power bank into water or other corrosive liquids

12. Do not use the power bank in strong vibration environment.

repeat the charging/discharging process once every 6 months and store it at half power

Please read this statement carefully and by using this product you will be deemed to have acknowledged and accepted it in full. Please check the product carefully before each use and do not use it if damaged or deformed. By using this product, you acknowledge and agree that you are fully responsible for your actions and the possible consequences of using this product. You undertake to use this product only for legitimate and lawful purposes. You understand and agree that ("Telesin") shall not be liable for any misuse, adverse effects, damages, injuries, penalties, or other legal consequences arising directly or indirectly from the use of this product. The user should follow the precautions including but not limited to those mentioned herein. To the extent Telesin reserves the right to interpret and modify this commitment within the limits of national laws and regulations

1. When the power bank is not used for a long time, please disconnect it in time and out it in a dry and ventilated place

2 During the use of the battery please select the corresponding power bank output port according to the required

3. It is recommended that the power supply be used in a 0-45°C temperature environment, otherwise it may damage

5. In low temperature environments, the performance of the power bank will deteriorate. To maintain the performance of the power supply it is recommended that you keep the power supply in a warm state and load it into your

7. Do not use in areas with strong static electricity or magnetic fields, as this could damage the safety protection of the

6. It is strictly forbidden to leave the power bank in a hot or cold place. To maintain the function of the power bank

11. It is forbidden to dismantle the power bank without permission, because there is a battery prope to fire inside

Company/ 会社框要 /Fmpresa/Azienda/Unternehmen/Компания Shenzhen Telesin Digital Co.,Ltd

Address/住所/Adresse/indirizzo/habla a/Morada/aдpec Room 526,5/F,Block B,Bairuida Building,Vanke City Community, Bantian Street,Longgang District, Shenzhen,Guangdong,China.518000











