 


LEACCO	
规格	210*148mm
产品品牌	LEACCO
产品型号	AF020
产品名称	Air Fryer
版本	V1.02
色号	按文件颜色印刷
材质	封面220g铜版纸过胶, 内页80g书纸
装订方式	胶装
设计师	JY
备注	此文档版权归深圳海陆通科技有限公司所有, 请勿随意使用

LEACCO

Air Fryer

User Manual

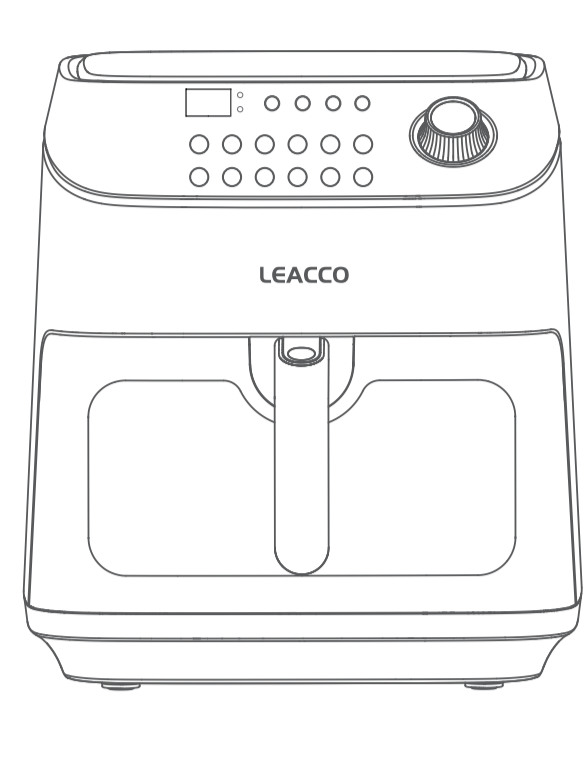

AF020

Printed in the Republic of China and other like places.

Manufacturer : Shenzhen Wonland Technology Co., Ltd.
Add : 1111, Jinhua Tower, Taoyuan Community, Dalang Street, Longhua District, Shenzhen, P.R.C
E-mail: Leacco_hk@163.com

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	01	COOKING TIPS	12
WHAT'S INCLUDED	02	MAINTENANCE AND CARE	14
KNOWING YOUR AIR FRYER	03	EXTERIOR	15
AIR FRYER	03	FRYER BASKET AND CRISPER PLATE	15
CRISPER PLATE	03	STUBBORN FOOD RESIDUE	16
CONTROL PANEL	04	SPECIFICATIONS	16
GETTING STARTED	04	TROUBLESHOOTING GUIDE	16
USING YOUR AIR FRYER	05		
POWERING ON	05		
PREHEATING	06		
SELECTING PROGRAMS	07		
SETTING TEMPERATURE	09		
SETTING TIME	10		
PAUSING/RESUMING	11		
POWERING OFF	11		
OVERHEAT PROTECTION	12		

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plug, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always use with extreme caution when moving an appliance containing hot oil or other hot liquids.
- Always unplug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "OFF", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- A short power supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- An appliance provided with a flexible cord less than 4-1/2 feet (1.4 m) in length shall be provided with the following information:
 - A short power supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
 - Longer detachable power supply cords or extension cords are available and may be used if care is exercised in their use.
 - If a longer detachable power supply cord or extension cord is used:
 - The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.

 
WHAT'S INCLUDED

CAUTION: Hot surface


- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved:
 - Children shall not play with the appliance.
 - Cleaning and user maintenance shall not be made by children without supervision.
 - Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years old.
 - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Kyocel will accept no liability or responsibility for fires, explosions or electrical shocks caused by improper operation, disassembling the air fryer or by not adhering to the above safety instructions.
- Save these instructions.



KNOWING YOUR AIR FRYER

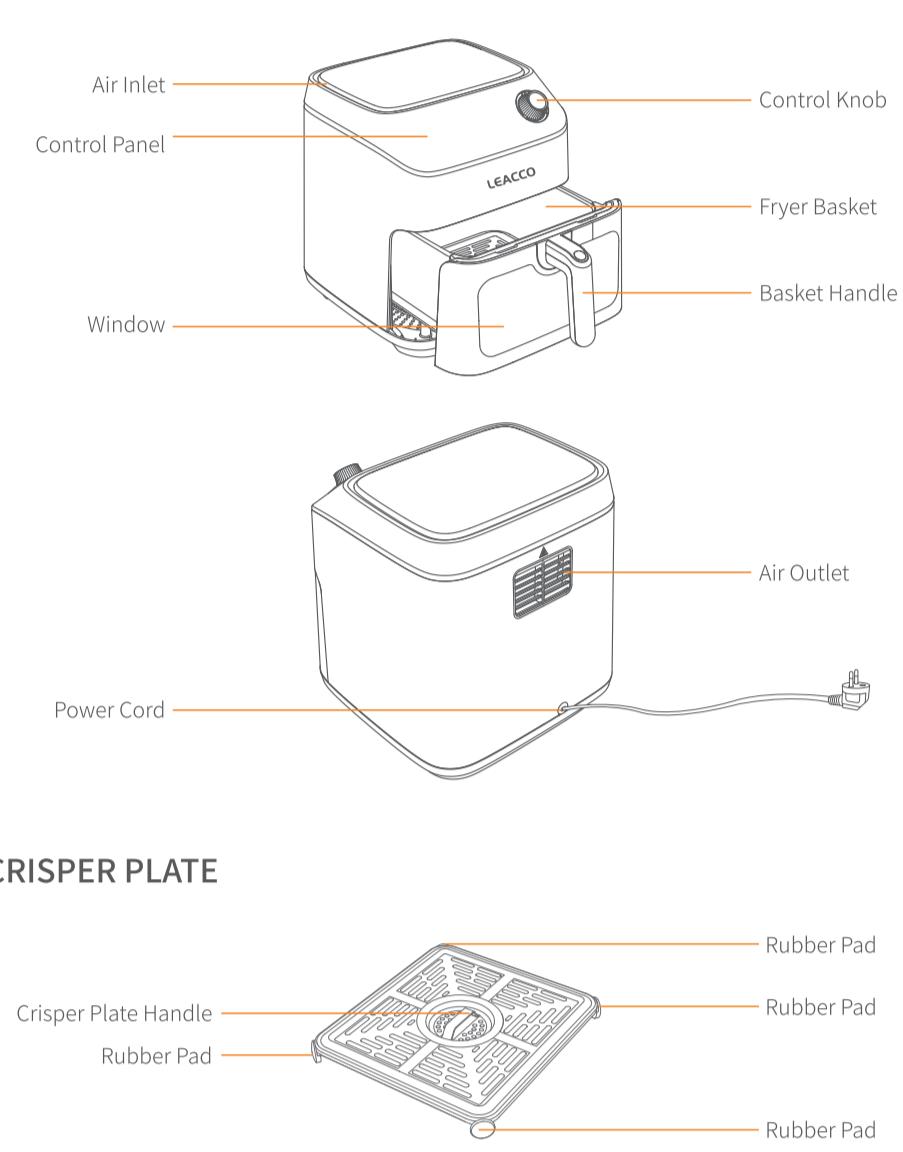


CONTROL PANEL

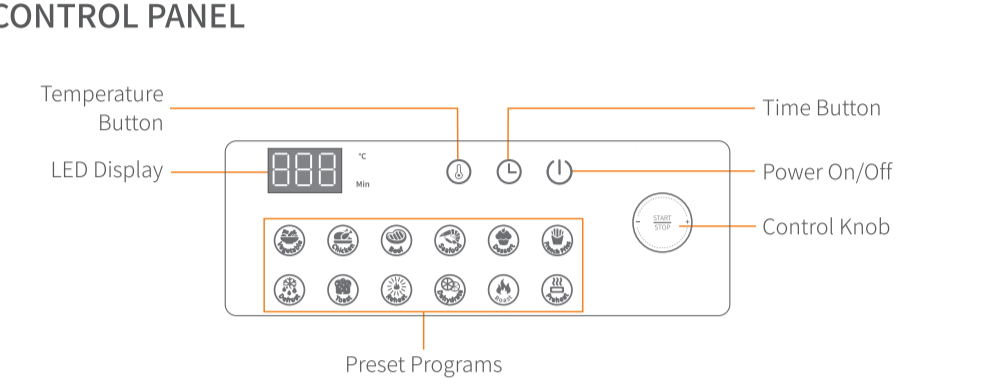 

GETTING STARTED

 
- Remove all the packaging materials, stickers and labels from the air fryer.
- Draw out the Fryer Basket, wash the Fryer Basket and the Crisper Plate in warm, soapy water or in a dishwasher, then rinse and dry thoroughly.

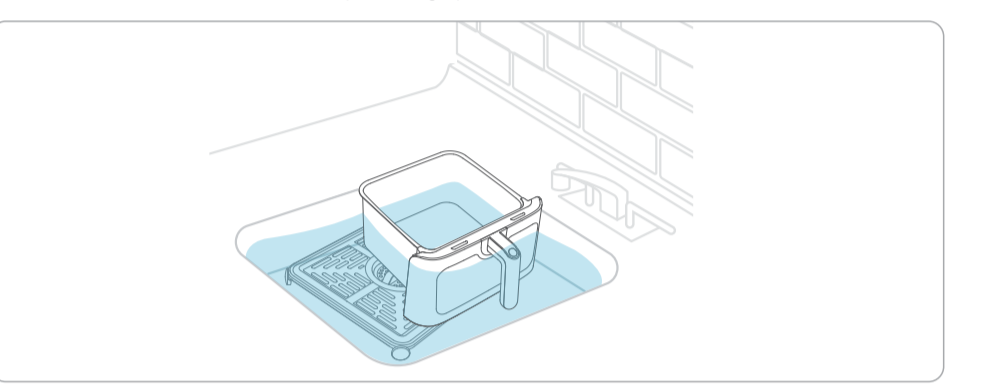

USING YOUR AIR FRYER


POWERING ON

 Step 1: Plug the air fryer into an outlet, and you will hear a beep. The power button will light up at low brightness, while all the other button indicators will flash once, then be off.

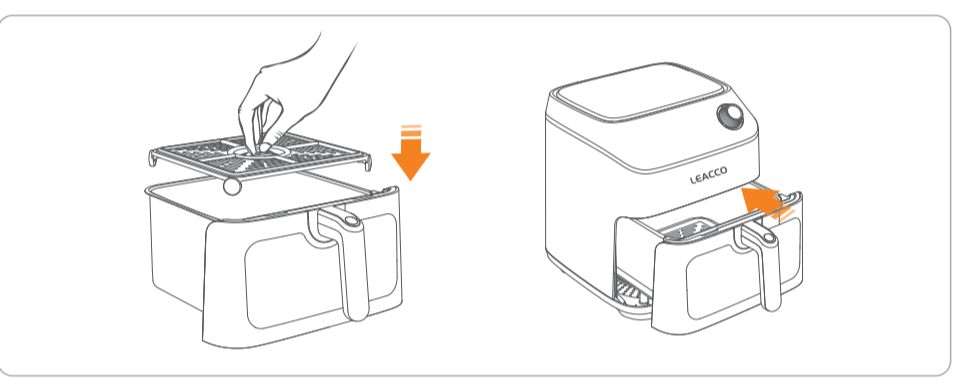


PREHEATING

 Step 1: Press the Preheat button, and the indicator will start flashing.

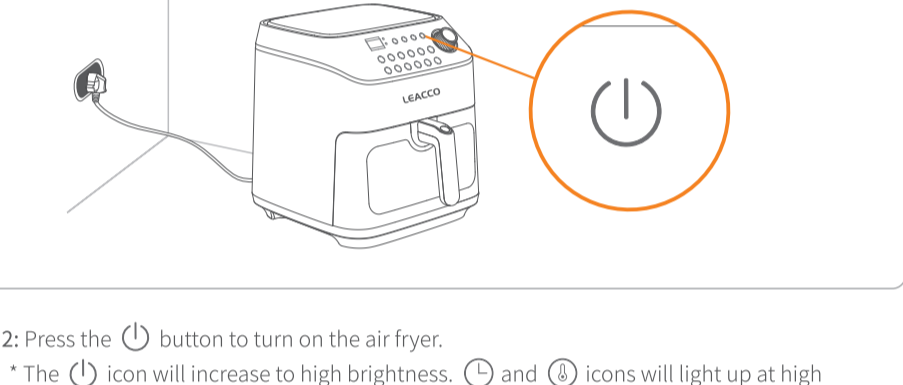


 Step 2: Press the Power button to turn on the air fryer. The LED icon will increase to high brightness, and the other button indicators will light up at low brightness. The LED Display will show 180°C and 15 Min alternately every 3 seconds.

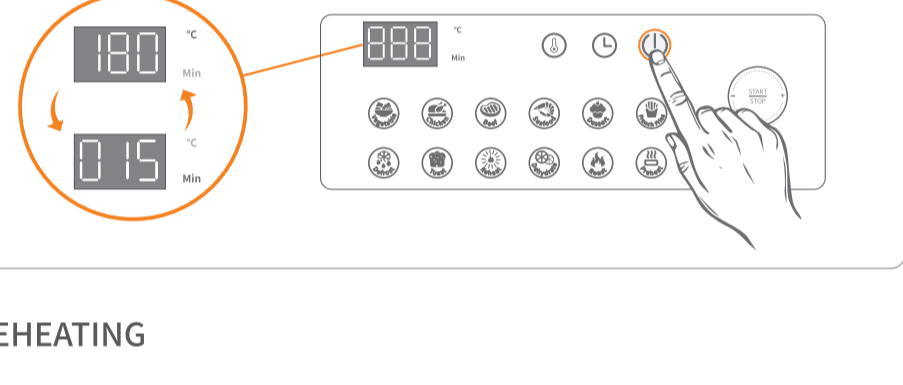

SELECTING PROGRAMS

 After preheating, you can select the program you want from Vegetable/Chicken/Beef/Seafood/Dessert/French Chip/Defrost/Toast/Reheat/Dehydrate/Roast/Preheat and refer to the above step for cooking.

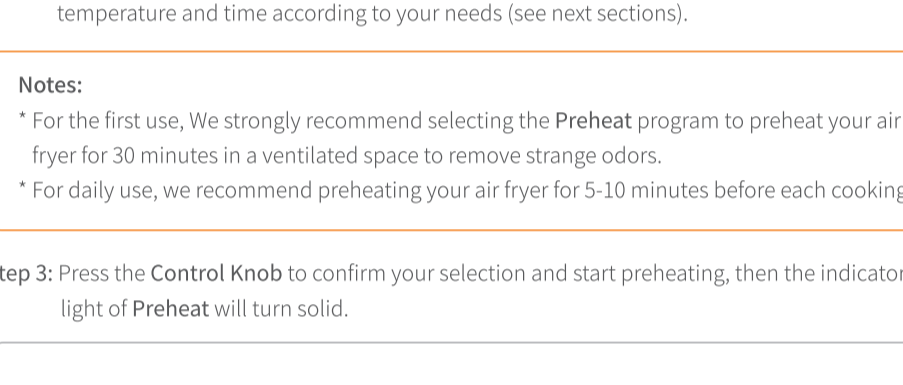


Please refer to the following chart for the default temperature and time of the 12 preset programs.


Program	Default Temperature	Default Time
Vegetable	150°C	8MIN
Chicken	200°C	20MIN
Beef	190°C	20MIN
Seafood	180°C	6MIN
Dessert	150°C	20MIN
French Fries	190°C	15MIN
Defrost	65°C	10MIN
Toast	160°C	8MIN
Reheat	160°C	5MIN
Dehydrate	70°C	360MIN
Roast	180°C	15MIN
Preheat	200°C	5MIN

SETTING TEMPERATURE

 After powering on and selecting the program, tap the Control Knob on the panel to start setting the temperature for cooking. The temperature value on the LED Display will start flashing.

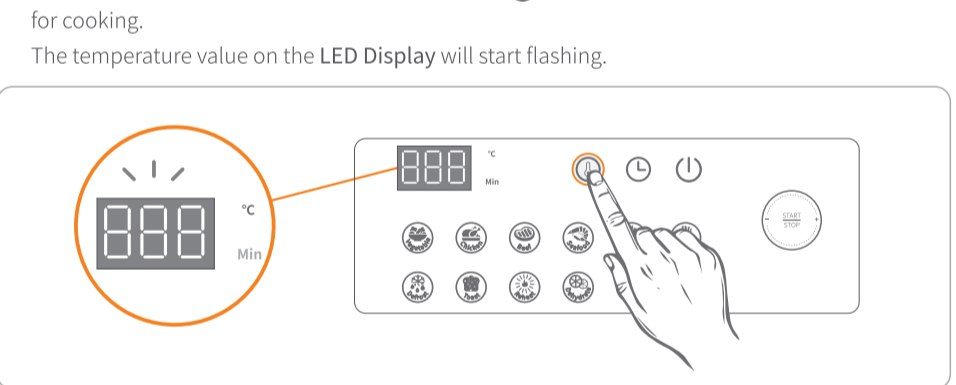

 
Rotate the Control Knob clockwise to increase the temperature. Rotate the Control Knob counterclockwise to decrease the temperature.

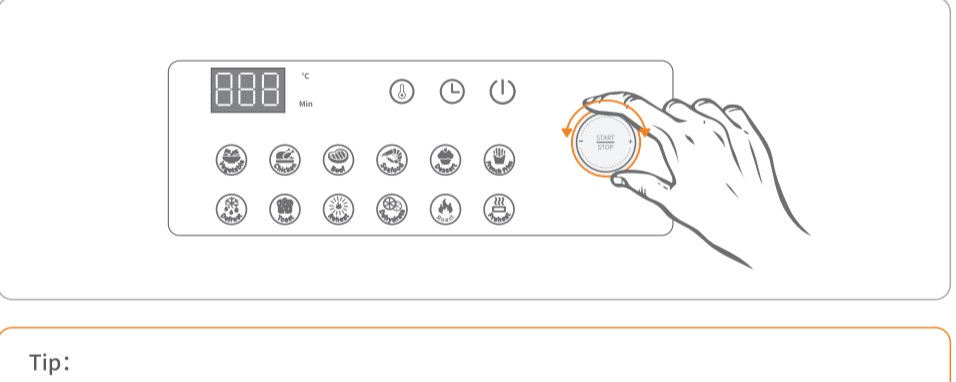


Tip: Temperature can be adjusted in the range of 40-170°C (for Dehydrate) or 40-200°C (for other programs), being increased or decreased by 5°C for every rotation.

SETTING TIME

 After powering on and selecting the program, tap the Control Knob on the panel to start setting the time for cooking. The time value on the LED Display will start flashing.

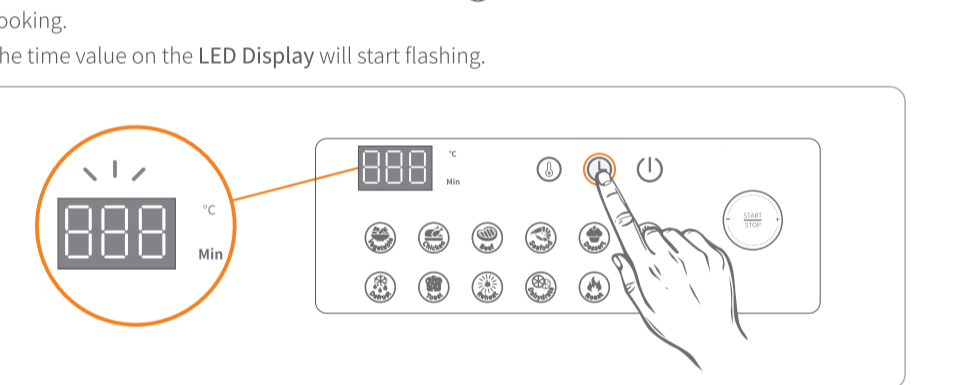

 
Rotate the Control Knob clockwise to increase the time. Rotate the Control Knob counterclockwise to decrease the time.

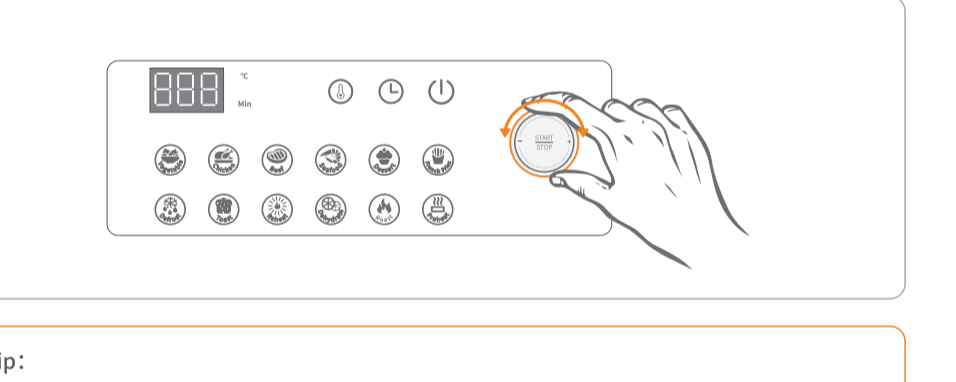


Tip: Time can be adjusted in the range of 1MIN-30MIN (for Dehydrate) or 1MIN-60MIN (for other programs), being increased or decreased by 1MIN for every rotation.

PAUSING/RESUMING

 To pause cooking, press the Control Knob on the Control Panel, or simply draw out the fryer basket at any time during cooking.

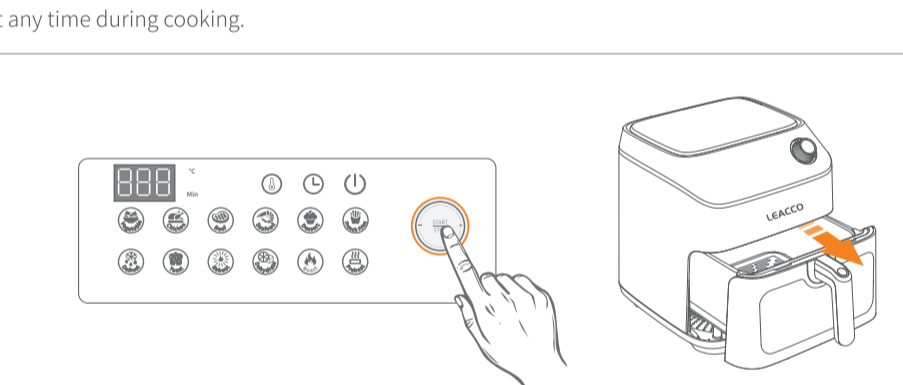

 To resume cooking, press the Control Knob again within 10 minutes, or push the basket back into place within 10 minutes. The air fryer will continue to work with the same settings as before the pause.

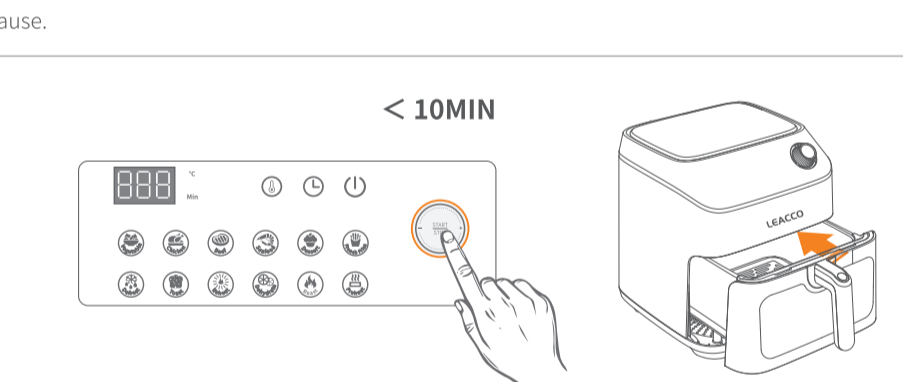

POWERING OFF


Option 1: When finishing cooking, the air fryer will beep 5 times and then enter standby mode. The Power On/Off button will light up at high brightness, and other buttons will light up at low brightness.

OVERHEAT PROTECTION

When the temperature of the air fryer reaches 220°C, the thermal protector inside the air fryer will automatically power off and the fryer will stop working. Please contact us after sales service in 10min.

COOKING TIPS

 
- Ensure that the height of the food does not exceed the height of the fryer basket.



MAINTENANCE AND CARE


IMPORTANT:

- Before cleaning, unplug your air fryer and wait until it cools completely. You may draw out the fryer basket for faster cooling.
- Do not immerse the whole air fryer in water or any other liquid.

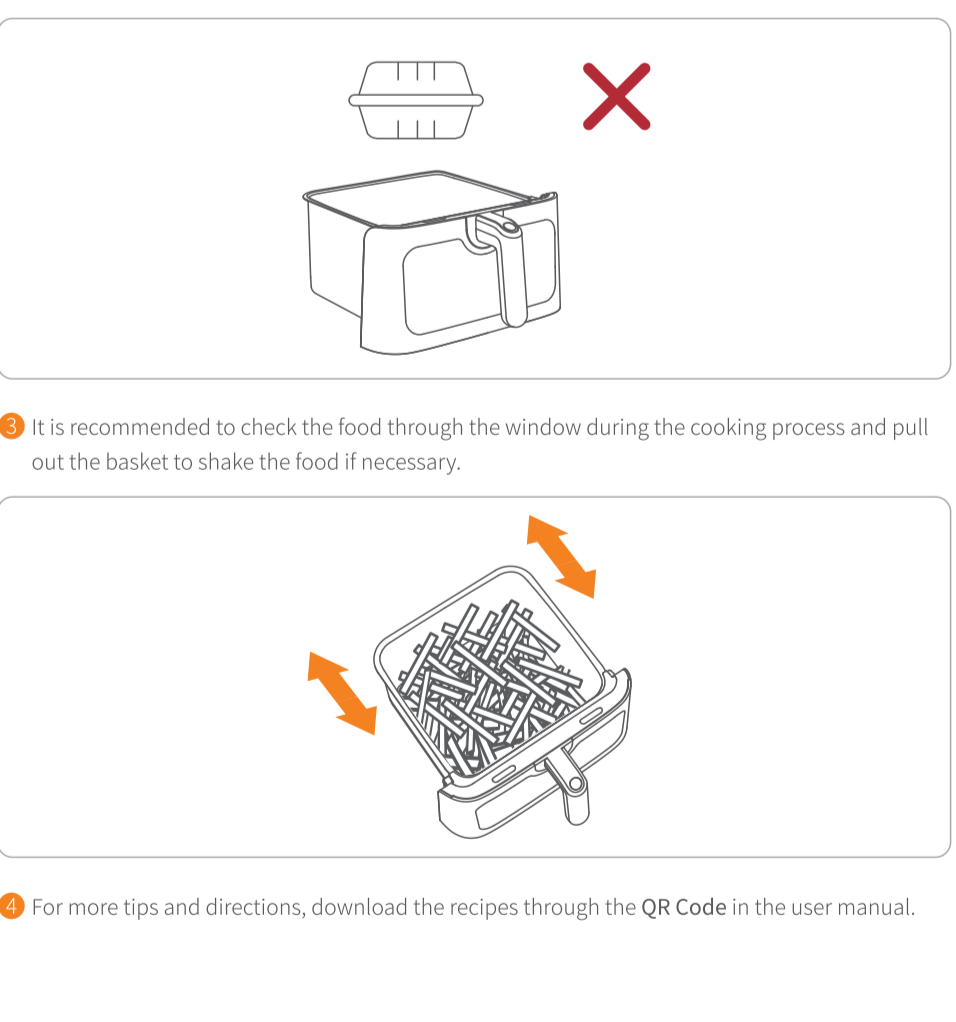

STUBBORN FOOD RESIDUE

 Clean the food residue stuck on the basket and the plate by soaking in warm and soapy water.

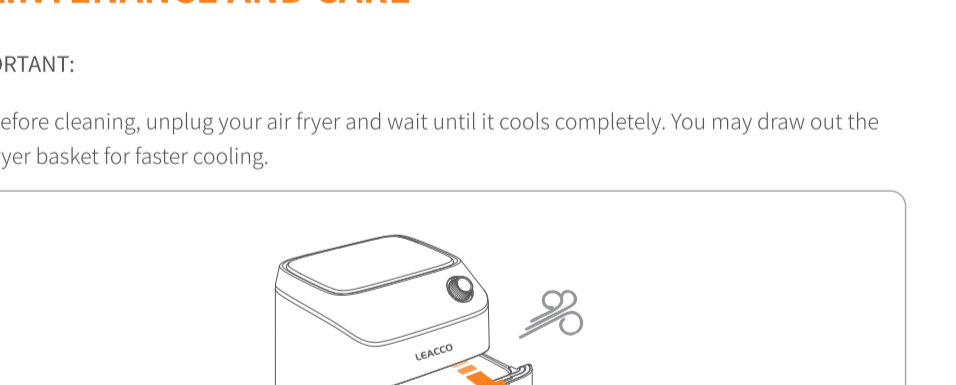

SPECIFICATIONS

Dimensions	278×268×333mm/10.9×10.6×13.1Inches
Capacity	4.5qt/4.3L
Input	220V~50-60Hz/1050W
Rated Power	1100W
Net Weight	4.5kg/9.9lb

TROUBLESHOOTING GUIDE

Q1: The air fryer will not turn on.
 * Check if you have plugged in the air fryer.
 * Push the basket securely into the air fryer.

Q2: The LED Display does not show anything.
 * Check if you have plugged in the air fryer.
 * Check if you have powered on the air fryer.
 * Check if the LED display screen is broken.

Q3: Food is not completely cooked.
 * Check if you have put too much food on the Crisper Plate. The foods will be undercooked if the basket is overfilled.
 * Increase the cooking temperature or time.

Q4: The Fryer Basket cannot be pushed into the fryer securely.
 * Check if you have put too much food on the Crisper Plate. Make sure the height of the food does not exceed the height of the fryer.
 * Check the edges of the air fryer are deformed. Contact us to deal with such issues.

Q5: While smoke comes out of the air fryer.
 * Cooking high-fat food will cause fat to drip to the bottom of the basket, which is normal. To avoid excess smoke while cooking, pour out fat drippings after every cooking and clean the air fryer according to the instructions.

Q6: The LED Display shows E1.
 * There is open circuit of the temperature sensor. Contact us to deal with such issue.

Q7: The LED Display shows E2.
 * There is short circuit of the temperature sensor. Contact us to deal with such issue.

Q8: The LED Display shows E3.
 * The air fryer overheat. Draw out the air fryer and wait until it cools down. Contact us if issue like this occurs again.

Q9: How to remove the strange odor of the air fryer?
 * It is normal for the air fryer to have a strange odor when it is used for the first time. The material used in this fryer is non-toxic and harmless, and has passed the relevant food safety inspection. When using the air fryer for the first time, please clean the air fryer first, then select the Preheat program to preheat the air fryer for at least 30 minutes to remove the strange odor.
 * If you are particularly sensitive to the odor, you can put orange peel, grapefruit peel or tea leaves into the Fryer Basket, then select the Preheat program to preheat the air fryer for at least 30 minutes to remove the strange odor.