

C6M(C6 main fan)

· 3 cables in total. Power supply connector/
C65 connector/ LED control connector



C6S(C6 sub fan)


· 2 cables in total. Connector plug,
both Female & Male. (Y-Type)

• Fan Size : 120 x 120 x 25mm • Fan Screw




C6M (C6 MAIN FAN) | 케이블 연결 방법 | HOW TO CONNECT THE CABLES -----

- ① Connect the power supply cable.

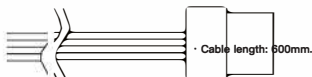


· Connect with 4pin power supply connector.

- ② Connect LED controller.

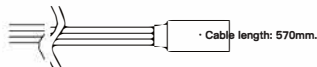

· Connect the reset button on the outer case, after connecting the cables, the reset button will be able to control LED effects.

- ③ C6S (Sub fans) connector

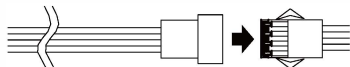

· Attached cable length: 120mm.
· Connect the second fans with the main fan connector.

- ④ LED mode


• Use the reset button to control LED effects.

- RGB action mode
- Single color mode
- LED off mode
- Press the reset button for 3 seconds to turn off LED mode. (With the fans still running.)


※ The controller can only control LED mode, fan speed CAN'T be controlled with the controller.

C6S (C6 SUB FAN) | 케이블 연결 방법 | HOW TO CONNECT THE CABLES -----

- ① C6S (Sub fans) connector

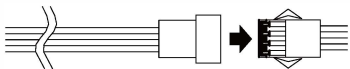

· Connector length: 600mm+ 120mm.
· Female & male plugs can be used to extend the side and able to install multiple C6s fans.

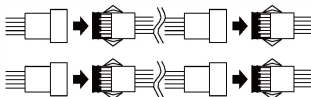

· C6S fans are able to extend through this connected cable, but excessive fans are not suggested.