


2.Connect the Mini Vac with the supplied charging cable to the charging port and plug it into any USB power adapter.



3.When the blue signal light turns off the Mini Vac is completely charged.


### INSTRUCTIONS FOR USE

1.Press the button to turn on the vacuum cleaner and use it. The bottom of the machine comes with a brush that can brush stubborn stains.

2.Hold the bottom cover with one hand, and then hold the body counter clockwise to open the waste bin, clean the waste, align it with the slot, and tighten it clockwise.



## DESK-TOP ELECTRIC DUST COLLECTOR USER MANUAL TW8052

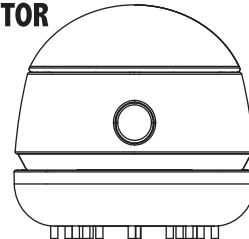

LITHIUM BATTERY  
POWER SUPPLY



POWER BUTTON



STORAGE BOX  
DESIGN



### ATTENTION

- The adaptor with output above 5V is not allowed.
- To avoid damage, the continuous working time should be less than 10 minutes.
- Keep the Mini Vac away from water and spills.
- Do not allow large objects to block the bottom opening from airflow.
- Children should be under the instruction of adults before using it.

### SPECIFICATION

Description: Desk-top Electric Dust Collector  
Model: TW8052 Continuous working time: ( ≤ 10 min )  
Power: 600mAh 3.7V Brush height: 4 ± 0.5mm

### PART NAME

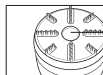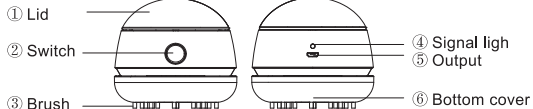

Keep fingers away from the hole on the machine bottom while it is working.

### FEATURE

- Clean the office desk, keyboard...etc soon.
- It is good help to catch the cigarette ash ,crumbs, eraser shavings and scraps of paper etc...
- Powered by Lithium batteries charging.

### CHARGING OPERATION

1.Hold the Mini Vac body, gently lift and rotate the top lid and remove charging cable from the storage compartment

