


Mcdodo

User Manual

CH-234
Transparent
Magnetic Wireless Charging Car Mount



Functional Component

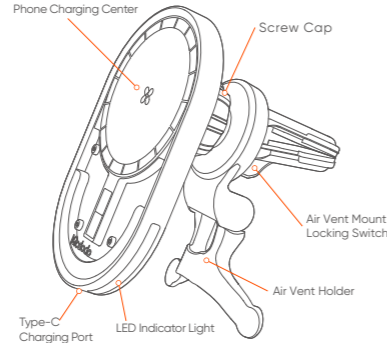

Before using this product, please read this guide to ensure using safely & properly. About product's other information, please contact manufacturer.

! For the fastest and safest charge, use a Mcdodo Cable or your device's original cable.

Specification

Model: CH-234
Input: 5V=3A, 9V=3A
Output: 5W / 7.5W / 10W / 15W
Total Output: 15W
Dimension: 98.4 x 61.2 x 26.2mm
Weight: 83g
Cable Length: 1m
Material: Aluminum alloy / PC+ABS / Tempered Glass / Magnet
Product List: Wireless Charger x 1,
Type-C to Type-C Data Cable x 1,
Air Vent Mount x 1,
User Manual x 1,
Warranty Card x 1

Indicator Light Description


Status	Indicator Light (Color: White)
Connect to power supplier	The indicator light turns off after 10 seconds of breathing
Charging	After the indicator light is breathing for 10 seconds, it will switch to a faint light and continue breathing.
Completed Charging	The indicator light is on (faint light)
Disconnect to power supplier	The indicator light turns off after 10 seconds of breathing
FOD Warning	The indicator light flashes quickly

WARNING

- Do NOT dismantle or modify the product.
- Do NOT store the product in wet conditions.
- Do NOT keep or use the product near heat sources.
- Do NOT let water or any other liquid flows into the inside part of the product. This would cause damages to the product.
- Do NOT install the wireless charger over the air bag cover or within the air bag deployment zone.
- Make sure to remove metallic, magnetic protective case or chip

- cards like bank cards etc. from the device when charging.
- While charging, the charger may heat up. This is normal and should not affect charger's performance. If the charger feels hot to the touch during this charging process, remove the device from the charger and allow it to cool down before restarting the charging process.
- Avoid using bent or damaged USB cable.

Instruction Manual

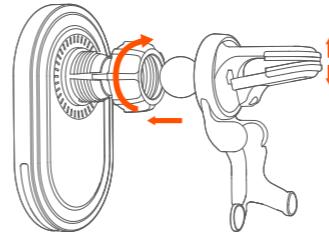

How To Setup

1. Insert the ball joint of the air vent mount into the knob.
2. Lock the knob in clockwise direction.
3. Press to open the clamp and mount it on the air vent slots.

How To Charge

- A. Connect the Type-C cable to the Wireless Charging Car Mount.
- B. Snap on the Qi-compatible device onto the magnetic surface of the Magnetic Wireless Charging Car Mount.
- C. The device will be started to charge.

Remark: Connect the Magnetic Wireless Charging Car Mount to the car charger that equips with QC3.0 or PD3.0 technology to maximize charging efficiency.

Disposal Of Electronic Products

- Do not place the product as household waste.
- Please dispose of discarded electronic products properly according to local regulations.
- Mcdodo encourages you to participate in electronics recycling program.

Toxic & Hazardous Substances or Elements Table

Part name	Toxic and Hazardous Substance					
	Pb	Hg	Cd	Cr6+	PBB	PBDE
Main Engine	X	0	0	0	0	0
Accessories	X	0	0	0	0	0

This table has been made in accordance with SJ / T 11364.
0: indicates that the content of this toxic and hazardous substance in all the average materials is within the limit specified in GB / T26572.
X: indicates that the content of the toxic and hazardous substance in at least one of the average materials is over the limit specified in GB / T 26572 .
The product complies with EU RoHS 2.0 directive(2011/65/EU)

Charge Faster , Go Further