


# Baseus

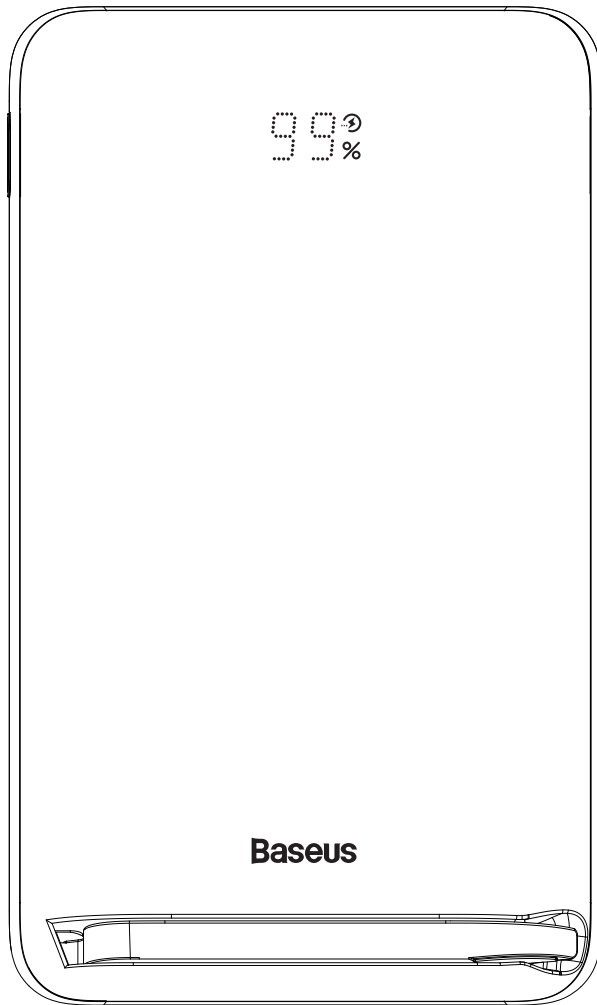

## User Manual

### Baseus Magnetic 10000mAh 20W

Please read this user manual carefully before use and keep it for future reference

## 1. Product Specifications

Brand: Baseus

Name: Magnetic Bracket Wireless Fast Charge Power Bank 10000mAh

Model No.: PPCXZ10

Battery: Polymer Lithium battery

Material: ABS+PC

Power Capacity: 10000mAh/38.5Wh

Energy Conversion Rate:  $\geq 75\%$

Type-C Input: 5V~3A; 9V~2A

Type-C Output: 5V~3A; 9V~2.22A; 12V ~1.5A

Wireless Output: 5W/7.5W/10W/15W

Total Output: 5V~3A

Product Size: 117.3x69.7x20.3mm

Product Weight: About 220g

## 2. Packing List

Power Bank \*1

User Manual \*1

Charging Cable \*1

## 3. Product Wireframe



## 4. Product Description

This product is a portable power bank that can provide wired or wireless charging for mobile phones, tablets, and other digital products. The product combines cabled charging and wireless charging together with magnetic design and LED digital display, which can be used as a phone mount or stand as well. It also supports 20W PD fast charging and 15W wireless fast charging with built-in overcharge, over-discharge, temperature protection and other safety protection circuits.

## 5. Use Environment

Working Temperature: Non-tropical area, 0°C to 35 °C

## 6. Icon Description

The 5-year icon refers to the "valid environment-friendly use period", not the product quality assurance period. Electronic products contain toxic and harmful substances such as lead, mercury and cadmium. The overdue use of these products may lead to leakage or mutation of these toxic and harmful substances, cause environment pollution or serious damage to people and property. The term of "environment-friendly use period" means that all electronic products shall be used within this validity period. We are free of any responsibility against safety issues caused by using the product beyond its safe service life.

## 7. Operation Instructions

Power button

1) To check battery status: Press the button once to check the battery status (remaining power). The indicator will light up about 30s before it automatically turns off.

2) When charging using a cable:

The power bank will automatically start to output when you connect a charging cable to it.

However, due to compatibility issues, for some phones you need to press the power button once to start charging. The output mode will stay for 30s after you press the button, during which if there's no device connected, the mode will automatically shut down.

### 3) When charging wirelessly:

Press the button once to initiate the wireless charging mode, put your device (supports wireless charging) onto the charging area to start wireless charging in 30s after the indicator light up. The wireless charging mode will automatically shut down if there's nothing put onto the charging area in 30s.

## 8. Wireless Charging Tips

Place your phone onto the wireless charging area (as it shows in the picture) for wireless charging, The distance between the charging phone and the power bank must be within 8mm for wireless charging to work, if not it will stop charging, and you need to adjust the phone's position.

## 9. Safety warning instructions Tips


- There mustn't be any metal objects or materials (like iron plates, rings, metal phone case, etc) between the back of the charging phone and the charging area when charging wirelessly.
- When wireless charging, if any interference or serious overheating occurs, it may be that the receiving coil of the charging phone is not completely aligned with the wireless charging coil, or if there is metal object in the phone case. Please try to cool down the phone first, remove the protecting case, and then align it to the correct position.
- Please do not dismantle the product by yourself. Improper use or placement may compromise the service life or damage the product, to which our company will not bear any legal responsibilities nor offer any guarantee. Please understand.
- Power banks have conversion efficiency, so the battery capacity of power bank is not equal to the rechargeable capacity.
- Please charge your power bank periodically (recommending at least once every 5 months ) in order to maintain a long service life.
- Avoid strong physical effects, including knocking, throwing, trampling, squeezing, etc.



This equipment complies with the provisions of Directive 2012/19/EU and Directive 2006/66/EU. It is strictly forbidden to dispose of this equipment with ordinary trash. It must be recycled. This symbol indicates that the product shall not be treated as regular domestic trash, and must be delivered to a recycling center that is capable of recycling electronic and electrical equipment.

It is hereby declared that PPCXZ10, a product model of Shenzhen Baseus Technology Co., Ltd., complies with the provisions of Directive 2014/53/EU, Directive 2011/65/EU. The full text of the EC Declaration of Conformity can be found on the following website: [www.baseus.com](http://www.baseus.com)

**Warning** Please follow the above safety instructions otherwise it will cause fire, electric shock, damage or other injuries.



株式会社成洋

Shenzhen Baseus Technology Co., Ltd.

Add: 2th Floor, Building B, Baseus Intelligence Park, No.2008, Xuegang Rd,  
Gangtou Community, Bantian Street, Longgang District, Shenzhen

Executive Standard: GB/T 35590-2017

Hotline: +86-4000-712-711 Website: [www.baseus.com](http://www.baseus.com)

PB3695Z-P0A0

1000045356

Designed by Baseus

Made in China