


项目: S001
品名: 中英文说明书
料号:
版本: A

更新日志:

图档识别

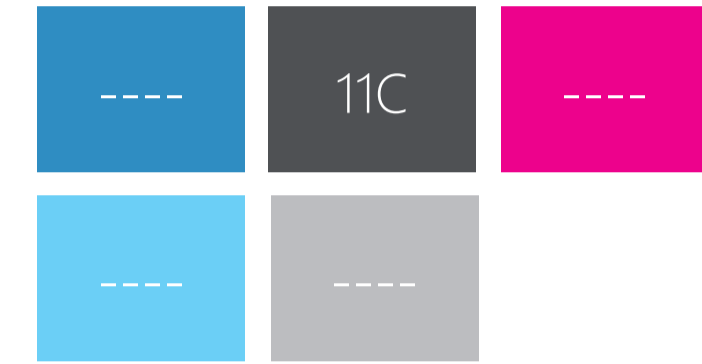

裁切线

压痕线

标注线

图档比例: 1: 1

技术要求

- 1. 尺寸: 80x100mm
- 2. 材质: 70g书写纸
- 3. 印刷: 专色印刷
- 4. 工艺: 风琴折
- 5. 公差: ±1mm
- 6. 备注: **英文作为主封面**

注: 所有材料必须符合ROHS规定.

资料确认

品牌: 电子:

市场: 品质:

软件: 包装:



东莞市猎声电子科技有限公司
Dongguan Liesheng Electronic Co., Ltd.

100 mm

80 mm

01 Appearance and package list

Long press to turn on when off, long press to turn off when on. Locked screen state, short press to wake the screen.

Heart rate sensing area

Package list: Watch x 1, Charging cable x 1, User manual x 1

02 Charging

Align and fit the charging contacts on back of the watch to the metal contacts of the charging head, wait for the watch screen to display charging power indicator.

Precautions:
1. Please use the charging cable in the package, and dry the charging contacts before charging.
2. Connect the charging cable to a standard USB charger purchased through regular channels, and a power adapter that has obtained CCC certification and meets the standard requirements.
3. If the watch cannot power on after being left for a long time, when used again, it needs to be pre-charged for about 1 minute to display charging icon.

03 Download and match

Haylou Fun App (hereinafter referred to as App) is a must-have app for using the watch. You can manage your watch and experience more watch functions through the App.

- Press and hold the power button of the watch to power on.
- Scan the QR code on the watch screen with your mobile phone to download the App.
- You can also scan the QR code below or download and install the App in the app store, iPhone users can also search, download and install the App in the App Store.
- Open the App, click "+" in the upper right corner, and select "Scan" to scan the QR code to pair. Or select "Add device" to search and pair in the device list according to the name of the watch. Please confirm the Bluetooth name of the phone and the watch are the same when pairing.

5. You can start using the watch after pairing successfully.

04 Wear

- For daily wear, wear the watch about one finger distance from the wrist bone, and adjust the tightness of the strap to a comfortable position.
- We recommend to tighten the watch strap during exercise and loosen it appropriately after exercise.

Note: Wearing too loosely may affect data collection by the heart rate sensor.

05 Strap assembly and disassembly

If you need to assemble/disassemble the strap, please refer to the diagram.

Note: After assembling the strap, please pull the strap appropriately to ensure that the assembly is successful.

06 More functions

Please scan QR code or open Haylou Fun on your mobile phone, and go to "My-Help" to view the content.

09 Warranty card

Warranty Period
12 months after you purchase this item. (or you may inquire your local shopper for more details.)
Free Service
Supporting any defects caused by quality issues occur within the warranty period, please take this warranty card and purchase receipts to your distributor for free exchange service.

Model Number	
Date of Purchasing	
User's Name	
User's Phone	
User's Address	
Shop's Name	
Shop's Address	
Comments	

Free exchange service will not be accessed under following circumstances:
1. Damages caused by unauthorized disassembly.
2. Defects or physical damages caused by leaking or dropping off.
3. Damages caused by act of God.
Supporting your item is within any damages or defects except the above circumstances, please return to us or your distributor for free repairing.

100 mm

80 mm

07 基本参数

产品名称: HAYLOU Watch 2 Pro
产品型号: HAYLOU Watch 2 Pro
主体尺寸: 48.82*37.7*10.83mm
手表重量(含表带): 51.4g
分辨率: 240 x 284
蓝牙连接: 蓝牙 V5.0
电池容量: 250mAh
输入参数: 5V=500mA

电池续航: 10天(全天心率开启)
防水等级: IP68
工作温度: -20°C~40°C
同步数据平台: Haylou Fun
设备要求: Android 4.4 及以上, iOS 9.0及以上版本

02 充电

将手表背面充电触点对准, 贴合充电头的金属触点, 直到手表荧屏上显示充电电量指示。

注意事项:
1. 请使用包装内自带的充电线, 充电前请插充电触点。
2. 将充电线连接至原装渠道购买的标准USB充电器, 应获得CCC认证并符合国家强制性标准。
3. 若手表长时间放置后无法开机, 再次使用时需充电15分钟左右才显示充电指示。

03 下载和配对

Haylou Fun App (以下简称App) 是使用手表的必备应用, 可以通过App管理手表, 体验手表带给您的更多功能。

- 安装手表应用程序。
- 通过手机扫描手表类项上的二维码, 下载App。
- 您也可以通过扫描二维码下载App, 苹果手机用户也可以通过App Store上搜索下载App。
- 打开App, 点击左上角"+" 选择"扫一扫"二维码绑定连接, 或者选择"添加设备"在设备列表中搜索手表名称并快速配对设备并搜索绑定, 配对时请确认手机和手表的蓝牙名称一致。
- 配对成功后就可以开始使用手表了。

04 佩戴

- 日常佩戴将手表佩戴到距离肩膀一指距离, 并调整表带的松紧舒适度。
- 建议运动时收紧手表表带, 运动之后再再次调松。

注: 佩戴过松可能会影响心率传感器采集数据。

05 拆装表带

如需拆装表带, 请参考图示。

注: 安装表带后, 请适当拉紧表带, 确保安装成功。

06 更多功能

请扫描二维码或在手机上打开Haylou Fun, 在"我的-帮助"查看使用帮助内容。

10 服务政策

本产品售后服务严格按照《中华人民共和国消费者权益保护法》、《中华人民共和国产品质量法》实行售后三包服务, 服务内容如下: 在包有效期间, 您可以享受国家法定退换货、换货、维修的服务。

一、保修政策

- 自购买之日起1年内(电话平台在线客服次日24小时内), 本产品出现性能故障(指性能故障), 经由HAYLOU售后服务中心确认后, 予以免费维修或更换, 可免拆办退货、更换、维修服务。
- 本产品出现(性能故障)所列性能故障的情况, 经由HAYLOU售后服务中心确认后, 予以免费维修或更换服务。
- 自购买之日起12个月内(电话平台在线客服次日24小时内), 本产品出现故障(性能故障)所列性能故障的情况, 经由HAYLOU售后服务中心确认后产生质量问题, 可免费办理维修服务。

二、性能故障表

名称	性能故障
手表主体	显示屏所列功能失效 显示屏不显示/黑屏 震动失效 震动异常/震动不灵敏 触摸屏失效
充电线	无法正常给手表充电

08 产品中有毒物质的名称及含量

物质名称	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
手表主体	X	O	O	O	O	O
电池	X	O	O	O	O	O
表带	O	O	O	O	O	O
充电线	O	O	O	O	O	O

注: 1) 本指南内的限值数字为产品生产过程中所含物质的平均含量, 且不得超过以下限值。
2) 本指南内的限值数字为产品生产过程中所含物质的平均含量, 且不得超过以下限值。
3) 本指南内的限值数字为产品生产过程中所含物质的平均含量, 且不得超过以下限值。
4) 本指南内的限值数字为产品生产过程中所含物质的平均含量, 且不得超过以下限值。

东莞市猎声电子科技有限公司
Dongguan Liesheng Electronic Co., Ltd.