



Smartwatch Zeblaze Ares 3 Pro User Manual

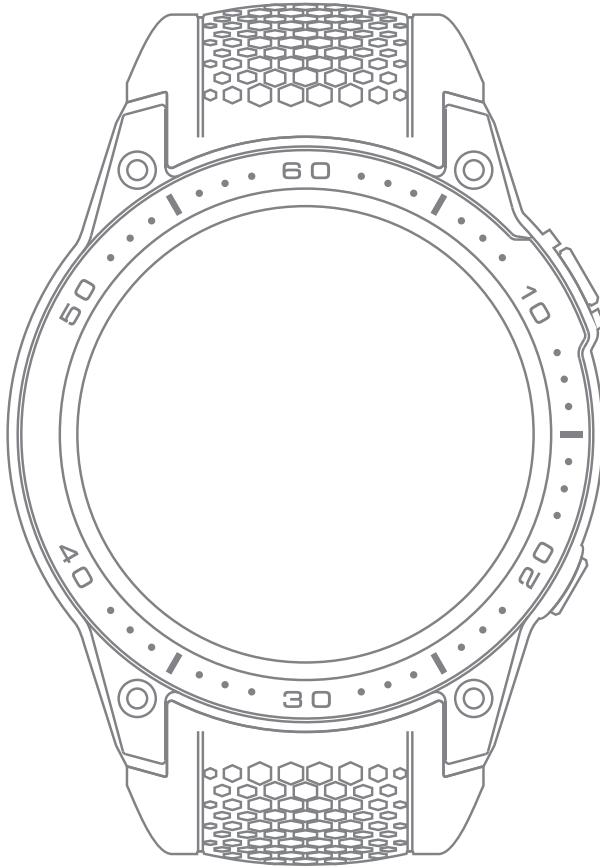

Product Introduction

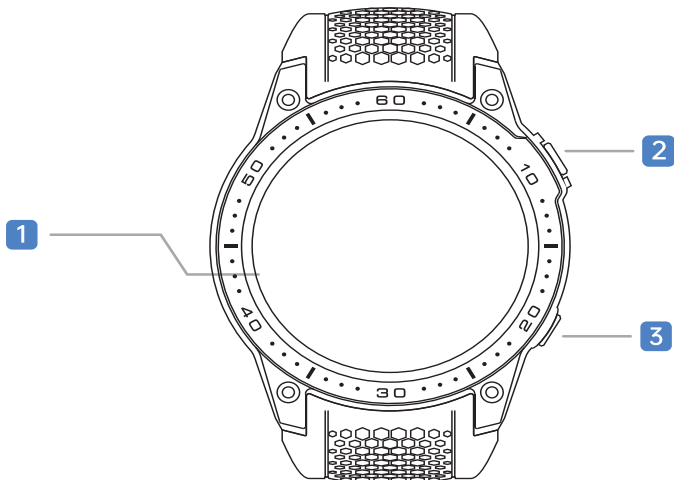

1 Display

2 Power Key

3 Sport Mode

Button Operation



Long press the power button

1. Power on
2. Power off



Short press the power key

1. Screen On
2. Return
3. Return to the main interface



Short press the sport button

1. Enter the sport interface

Screen Operation



Swipe up Interface:
Message interface



Scroll down Interface:
Control Interface



Left slide Interface:
Sortcut interface



Right slide interface:
Main Menu

App Download

1. You can search for "FitCloudPro" app in App Store / Google Play / Baidu Assistant to download.
2. Open the watchAPP sownload interface, use the scan function, scan to download or scan the QR code attached to download.



Note: After successful download and installation, please follow the interface instructions to register and log in for better experience and use of the product.

Connect

Pair with the watch using the "FitCloudPro" app on your phone.

How to connect:

Open APP >> „Device“ >> „Add device“ >> "Start Search">> Select the model and connect, wait for a while to complete the pairing.

Note:

1. In order to connect the watch and the phone successfully, Bluetooth must be enabled on the phone.
2. When using an Android phone, the user must grant location permission and enable the location information function on the mobile phone system, otherwise the device may not be found.

Firmware Upgrade

The APP will prompt a new firmware version, and the user can enter the APP interface and select firmware upgrade.

Upgrade Notes:

1. The update operation can only be performed when the watch's battery level is above 60%.
2. During the update process, the mobile phone interface will display an update progress bar, please do not perform any operations on the watch, wait until the mobile phone prompts that the update has been successfully completed, and the watch automatically restarts before starting the watch.

Waterproof Instructions

Waterproof grade: 3ATM

The waterproof performance of this product is not permanent and may weaken with the passage of time.

Add:

It is not recommended to wear in a hot bath. The molecular radius of water vapour produced when washing with hot water is small and easily penetrates into the crevices of the watch. As the temperature drops, it gradually condenses into water droplets, which damages the watch's circuit board and subsequently damages the watch.

Function Introduction

Smart Watch Support:

Bluetooth call, message notification, blood oxygen detection, blood pressure detection, heart rate detection, sleep detection, breathing exercise, exercise mode, remote control photography, music control, etc.

Basic Parameters



Wymiary

46.3 x 46.3 x 14.8 mm



Pojemność baterii

400 mAh



Wersja Bluetooth

BLE 5.2



Rozdzielczość wyświetlacza

466*466 px



Rozmiar wyświetlacza

1.43 inch



Czujnik

Hx3605

Maintenance

It is recommended to wear and maintain accordingly to the following three points:

1. Keep the product clean
2. Keep the product dry
3. Please wear the product correctly

*For stains that are not easy to remove, it is recommended to scrub with alcohol.

Safety Instructions

1. Although smart watches can detect real-time dynamic heart rate, they cannot be used for any medical purpose.
2. Do not disassemble or modify the equipment and accessories without authorization. Please contact after-sales service in case of equipment failure.
3. If the equipment is not used for a long time, please make sure to power up once every three months.



www.zeblaze.com

Email: Serwis@zeblaze.com

Producent: ShenZhen Zeblaze Smart Company Limited
Adres: Room 216-218, Yuan Xiong Building, Tongxing Road 26'
Ban tian Street, Longgang District, Shenzhen, Guangdong,
Chiny.