

## Robot Vacuum and Mop Combo Operation Manual

Read this operation manual carefully before using the product, and store the manual safely.

Robot vacuum-20/25



APP Download



Any after-sales problems, scan it!

## Table of contents

### Safety instructions

Warning ..... 2

Caution ..... 3

### Product overview

Main unit ..... 4

Two-in-one water tank and mopping module ..... 5

Charging Station ..... 5

### Product installation

Installation of mopping module ..... 7

### Installation and APP Connection

Quick Connection ..... 8

Slow Connection ..... 11

Turning on/off and cleaning modes ..... 14

Indicator status description ..... 15

### Device disassembly and cleaning

Disassembly and cleaning of rolling brush components ..... 16

Disassembly and cleaning of side brush ..... 17

Disassembly and cleaning of the two-in-one water tank and filter ..... 19

Disassembly and cleaning of mop ..... 19

### Troubleshooting

FAQs ..... 21

Technical data ..... 22

Disposal ..... 23


Warranty and limitations of liability ..... 23

## Safety instructions

Please read the manual before use.

Warning: To avoid injury to yourself and others, and to avoid unnecessary property damage, read carefully before using the product and observe the following "Safety instructions". The safety instructions are divided into two sections, "Warning" and "Caution". The "Warning" and "Caution" sections contain important information for safe use of the product and must be followed.

 Warning Important safety instructions to prevent death or serious injury from incorrect operations.

 Caution Important safety instructions to prevent minor injury or device damage from incorrect operation.

 Warning

---

1. Do not use this product in wet places such as bathrooms or near water sources;
2. Do not use it to clean up liquids, matches and wet garbage;
3. Do not pull out/insert the power cord plug or touch the socket with wet hands;
4. Do not use damaged power plugs or loose sockets;
5. Do not use the main unit to clean flammable liquids such as kerosene, gasoline, objects with sparks, toner cartridges, toner and other combustible dust; do not use the device near the above items, or in environments with flammable and explosive gases to avoid fires;
6. Do not disassemble, repair, or modify the product on your own, to avoid fire, injury, or damage, except for the replacement of consumables in accordance with the manual;
7. Do not charge non-rechargeable batteries. Please use an AC power supply with a rated voltage rather than a generator or a DC power supply to avoid fire hazards and electric shocks;
8. Please use a dry cloth to clean the dust on the plug regularly to avoid a fire hazard caused by poor insulation and other reasons;
9. Please make sure to insert the plug firmly to avoid electric shock, short circuits, and fire;
10. Please immediately cut off the power and stop using the device in case of any malfunction to avoid smoke, fire, or electric shock;
11. If the device deforms, overheats abnormally, emits a burning smell, or makes an unusual noise during charging or use, immediately disconnect the power supply and unplug the device. Place it in an open and non-flammable area to ensure safety. Faulty products shall be replaced and repaired by the manufacturer or its maintenance specialist to avoid danger;
12. Please make sure to pull the plug from the power socket before conducting any cleaning and maintenance to avoid electric shock and injury;
13. If the rolling brush malfunctions during use, please first turn off the power button and immediately check whether the rolling brush is entangled with hair or other long fibres, and clean it in a timely manner;
14. Do not spray water on the product body and plug, or immerse them in water;

15. When pulling out the plug, please make sure to hold the insulated part of the power cord and do not pull the power cord directly;
16. The battery is a sealed unit, and there is no safety hazard under normal circumstances; If liquid leaks out of the battery in extreme cases, it may cause irritation or burns. If you accidentally come into contact with the liquid, take the following instructions: ① skin contact - wash with soapy water; ② eye contact - immediately rinse with water for at least 15 minutes and seek medical help;
17. This device is not suitable for children or individuals with poor physical, sensory, and mental abilities or those who lack relevant experience and knowledge. Please provide supervision during use;
18. Please keep the robot vacuum and mop combo away from electromagnetic equipment in hospitals; instruct children not to play with the device as a toy; the device should only be used with the original accessories provided;
19. This power cord is only applicable for use with the robot vacuum and mop combo as specified by the merchant;
20. Before charging the device, check whether the power cord specifications match the required power voltage;
21. The appliance is only to be used with the power supply unit provided with the appliance;
22. This appliance contains batteries that are only replaceable by skilled persons;
23. Warning: the charging station against recharging non-rechargeable batteries;
24. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



#### Caution





---

1. Do not use this device outdoors, on non-flat surfaces, or in commercial or industrial environments;
2. Do not use the product in environments without protective fencing (such as duplex floors, open balconies, furniture tops);
3. Do not use it in environments above 35°C, below 0°C, or where there is any liquid or sticky substance on the floor;
4. Do not block the air outlet to avoid deformation, malfunction, or fire caused by overheating;
5. Do not drag the device to avoid scratching the floor;
6. Do not swing the device or allow young children to play with it to avoid injury or damage to the device;
7. Do not drop the device or collide it with other objects, or apply pressure to it to avoid fire or electric shocks caused by malfunctions;
8. Make sure to install the rolling brush and filter before using the device to avoid damage to the motor and device;
9. Check whether the power cord is intact before charging;
10. Before using the robot vacuum and mop combo for the first time or replacing the designated filter, turn off the main power and ensure the filter is properly installed;
11. Used battery packs should be properly disposed off. Do not discard them randomly;
12. Before using the product, arrange the desks, chairs, household items, floor objects, etc. neatly, and clear power cords and small items laying on the ground to avoid the product being blocked during cleaning;
13. When the machine is running, keep curtains and tablecloths away from the ground, and keep the carpet flat, so as to prevent the product from being blocked during operation and causing damage to your valuables;
14. Before the first use, make sure all room doors are open for the device to build a complete home map;



15. Do not stand in front of the device while it is operating to avoid obstructing the device from identifying the area to be cleaned;
16. If not used for a long time, the robot vacuum and mop combo should be fully charged before it is turned off. It is recommended to charge the device at least once every 3 months to avoid the battery damage;
17. Do not use or keep the device under extreme adverse conditions, such as extreme temperatures. It is recommended to use it in an indoor ambient environment and keep it in a cool and dry place.

## Product overview


### Main unit

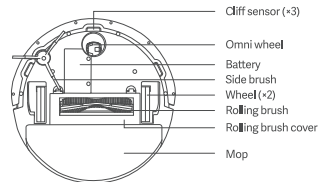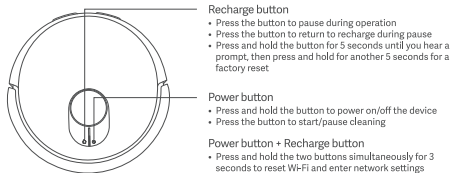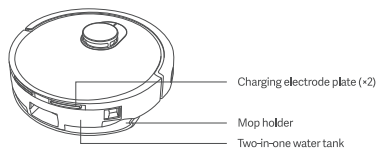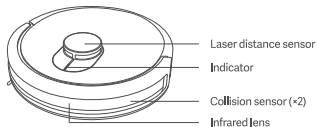

### Two-in-one water tank and mopping module

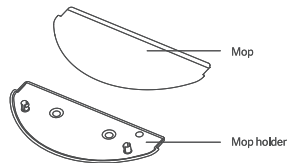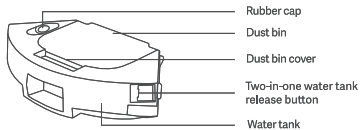


### Charging Station

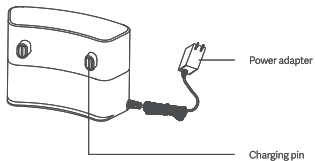


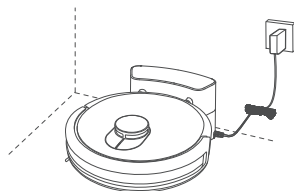
## Product installation

### Installation of Charging Station

Step 1: Find a suitable location against the wall to place the charging station and connect it to the power supply;

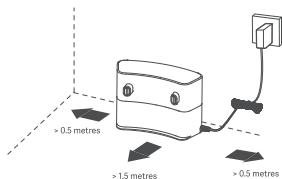

Step 2: When using the device for the first time, press and hold the  button to power it on, then manually place the main unit against the charging station for charging.




### Caution

1. Before use, please remove the anti-collision protection strips on both sides of the main unit, the protective film on the front collision lens, and the infrared lens protective film;
2. During charging, do not install the mopping module to prevent damp mops from leaking and damaging the floor;
3. Please put away the power cord, otherwise it may be dragged by the robot, causing the charging station to shift or power off;
4. Do not use this device in a room with infants and young children, and keep it away from them;
5. When the main unit is charging on the charging station, children or pets shall not be allowed to approach or collide with the main unit, to avoid danger;
6. In order to facilitate the smooth return of the main unit to the charging station after cleaning, it is recommended to start the appliance from the charging station and that you do not move the charging station during the cleaning process;

## Installation of mopping module


### Step 1: Install the mop

Insert the wrung damp mop into the mop holder and paste it on the Velcro;

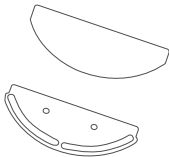


### Step 3: Install the mopping module

Install the mopping module into the bottom of the two-in-one water tank according to the direction shown in the diagram;

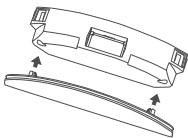


### Step 2: Fill the two-in-one water tank with water

Open the rubber cap of the two-in-one water tank inlet, pour clean water into the tank, then fasten the rubber cap;

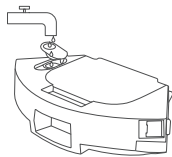

### Step 4: Install the two-in-one water tank

Install the two-in-one water tank into the main unit according to the direction shown in the diagram, until you hear a "click" sound.

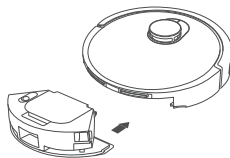

### Caution


1. Do not pour hot water into the two-in-one water tank to avoid deformation of the water tank; do not flush or soak the two-in-one water tank;
2. Do not use detergents, disinfectants, solid detergents, and other cleaning products to prevent corrosion and blocking of the two-in-one water tank;
3. Due to production testing reasons, there may be a small amount of water residue in the two-in-one water tank, which is a normal phenomenon;
4. When mopping the floor, set up virtual walls or a no-go area in carpeted areas; do not use the mopping function on the carpet;
5. When the device is charging or not in use, remove the mopping module, pour out the excess water in the water tank, and clean the mop to avoid mildew or odours;
6. It is recommended to clean the mop after each use to ensure the water output speed and cleaning effect. If necessary, the mop can be replaced with a new one;
7. When the main unit is charging on a wooden floor, timely remove the mopping module to prevent the mop from leaking and damaging the floor.




## Installation and APP Connection

### Quick Connection


1. Activate the **Bluetooth** and make sure your phone is connected with the 2.4 GHz WiFi that **usually only** shows the name of the WiFi.  
Please don't connect the 5GHz WiFi with your phone.
2. Download and install the APP: Search the "smart life" in Appstore/Google Play or scan the QR code to download it.
3. Open the "smart life" App, agree to the "User Agreement and Privacy Policy" and register your account.
4. Turn on the robot vacuum, then press the "🏠" and the "🏠" button meantime for at least 3 seconds until the WiFi button flashes.

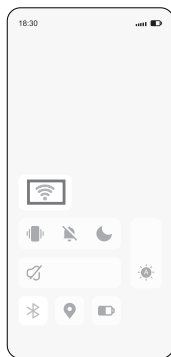



①

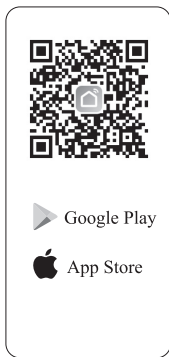

②

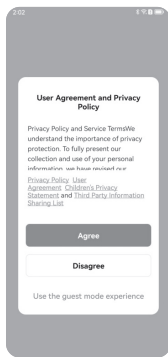

③

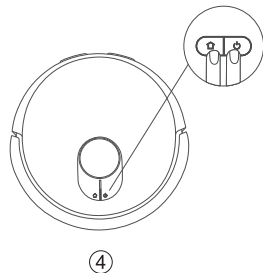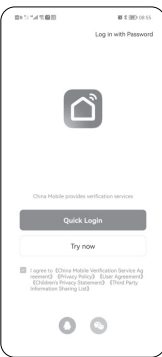


④

## Installation and APP Connection



### Quick Connection

5. Add your device: Open the "smart life" APP and click "Add" Device\* to add your robot vacuum.


6. Discovering Devices: Allow "smart life" APP to get the related permissions, then click "Add" (it usually needs to take 8-10 seconds.)

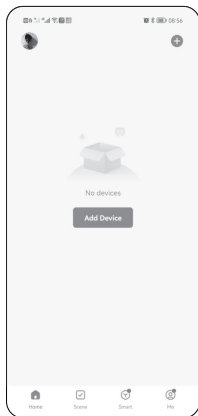

5

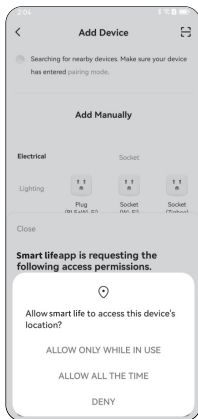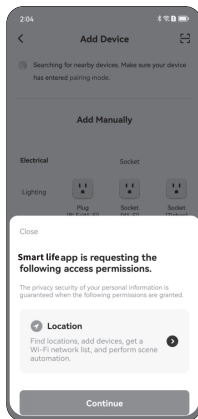

6

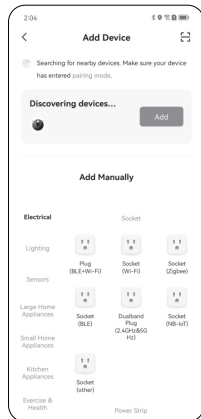


## Installation and APP Connection

### Quick Connection


7. Enter the WiFi password and click the "next".

8. Wait for auto-connecting. It needs to take 1-2 minutes.


9. Click "Done" and log in to the App operation page.

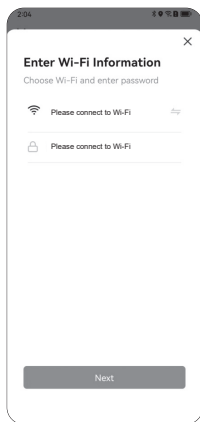

⑦

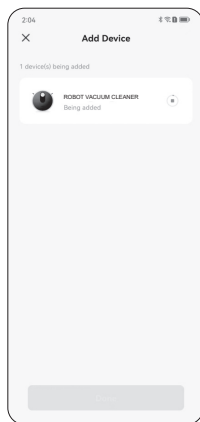

⑧

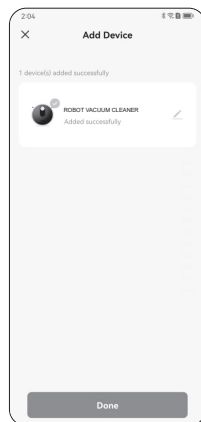


⑨


## Installation and APP Connection

### Slow Connection


1. Activate the WiFi in phone to connect to 2.4GHz network.
2. Download App: Search "Smart Life" in Appstore or scan the QR code.
3. Registration: Open the APP and complete the registration.
4. Log in the APP and click "Add Device"/+ Button.
5. Choose "Small Home Appliances" – Robot Vacuum (Wi-Fi).

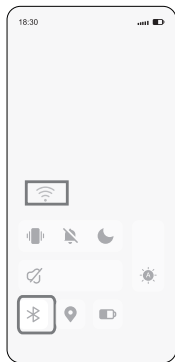


①

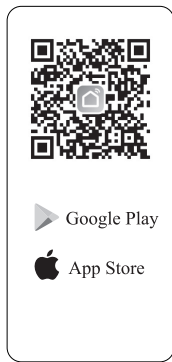


②

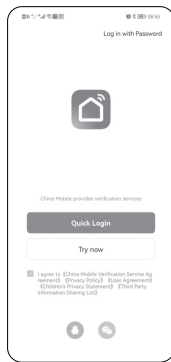

③

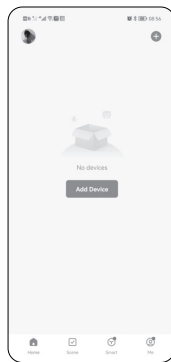

④

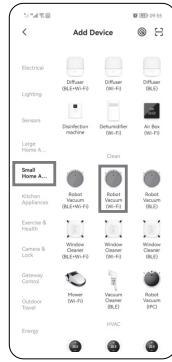


⑤


## Installation and APP Connection

### Slow Connection


6. Enter the password and click "Next".
7. Press both "Power + Charge" buttons for 3 seconds and the light starts to flash, which means the machine starts network distribution.
8. Click "Confirm the Indicator is Blinking" button.
9. Select the AP mode.

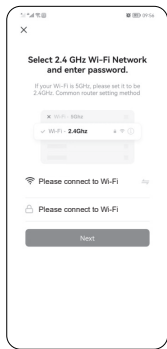


6

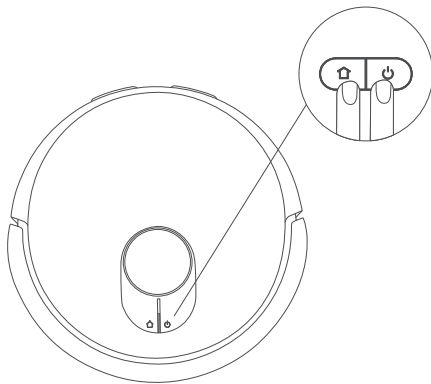

7

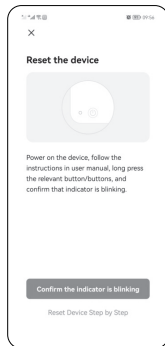

8

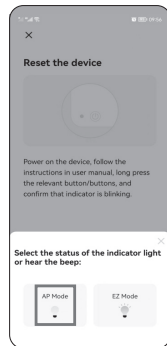


9


## Installation and APP Connection

### Slow Connection


10. Click "Next".
11. Then select SMATR LIFE XXX and return.
12. Wait for the connection.
13. Click "Done" to log in APP.

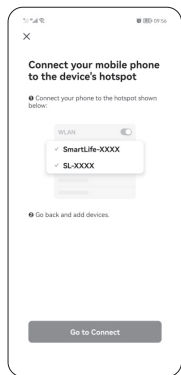


10

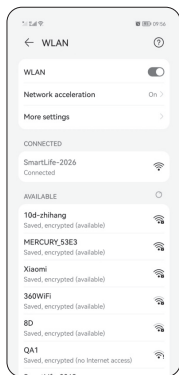

11

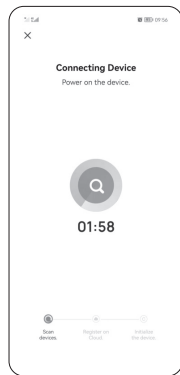

12

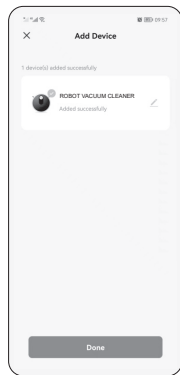

13

## Turning on/off and cleaning modes

### 1. Power on/off

Press and hold the power button for 3 seconds. The power button indicator turns on, and the main unit enters standby mode. When the main unit is stationary, press and hold the power button to turn it off, and the indicator will turn off.

When the main unit is in operation, pressing any button will pause the main unit. After a pause, press the power button again to continue cleaning.

### 2. Return to recharge

In standby mode, press the recharge button, and the main unit will return to the charging station to recharge. When the main unit has finished cleaning, it will automatically return to the charging station to recharge, and the indicator will flash white. If the battery is low during cleaning, it will automatically return to the charging station to recharge.

### 3. Quick map building

When the main unit is powered on for the first time, there is no map in the app. Place the main unit into the charging station, select quick map building in the app, and the main unit will build a map with one full house cleaning. After the main unit automatically returns to the charging station, the map will be completed and saved automatically.

### 4. Memory map

After the main unit successfully completes a quick map building or cleaning and returns to the charging station to recharge, the app will automatically save and update the map. After the map is successfully built, you can divide, merge areas or customise room names in the app.

### 5. Full house cleaning

Start full house cleaning through the app or by pressing the power button. The main unit will first carry out full house cleaning along a set path, then carry out edge cleaning, and automatically return to the charging station to recharge after the cleaning is finished.

### 6. Edge cleaning

Select Edge Cleaning in the app, and the main unit will automatically recognise the cleaning area and perform edge cleaning, and automatically return to the charging station to recharge after the cleaning is finished.

### 7. Area cleaning

After setting the area cleaning in the app, the main unit will clean according to the planned area

and automatically return to the charging station to recharge after the cleaning is finished.

### 8. Fixed-point cleaning

Select fixed-point cleaning in the app, then set the target point on the map. The main unit will automatically plan the route to the target point and clean in a 2×2 m square area with the target point as the centre. The main unit will automatically return to the charging station to recharge after the cleaning is finished.

### 9. Scheduled cleaning

Use the app to set the time of scheduled cleaning, and the main unit will automatically start cleaning at the specified time and automatically return to the charging station after the cleaning is finished.

If the Do-Not-Disturb Mode is enabled, the scheduled cleaning will not be executed during the Do-Not-Disturb period.

### 10. Add water or clean the mop during operation

During the cleaning process, if you need to add water or clean the mop, pause the device by pressing the power button, remove the two-in-one water tank and mopping module, add water or clean the mop, and then install the two-in-one water tank and mopping module. Finally, press the power button to continue working.

### 11. Sleep mode

If the main unit is not charging and there is no operation for more than 5 minutes, it will automatically enter sleep mode. If it stays in sleep mode for more than 6 hours, it will automatically turn off. To wake up the main unit, press any button or use the app.

### 12. Resume cleaning

During the cleaning process, if the battery is low, the main unit will automatically return to the charging station to recharge. After recharging, the main unit will automatically return to where it left off and continue the cleaning process. If you manually stop cleaning, then move or operate the main unit during the charging process, the resume cleaning will be cancelled.

### 13. Virtual wall/No-go area

In the app, you can set up virtual walls or no-go areas to prevent the main unit from entering areas that do not need to be cleaned.

Before using the virtual wall/no-go area function, you need to save the map in the app. Moving the main unit or major changes in the environment can cause the original map to become invalid and result in the loss of virtual walls/no-go areas.

#### 14. Do-Not-Disturb Mode

During the Do-Not-Disturb period, the main unit will not execute resume cleaning and scheduled cleaning or actively broadcast voice prompts. The Do-Not-Disturb Mode is enabled by default from 23:00 to 9:00. You can enable/disable the Do-Not-Disturb Mode or set the time period of the mode.

During the do-not-disturb time period, the indicator will go off after the main unit has been charged for one minute.

#### 15. Reset Wi-Fi

When the mobile phone cannot connect to the main unit after resetting the password or for other reasons, reset the Wi-Fi connection by following the actions in the app download of this manual.

#### 16. Factory reset

Press and hold the recharge button for 5 seconds until you hear a prompt, then press and hold for another 5 seconds for a factory reset. The main unit needs to reconnect to the app, and all related settings in the app will be cleared.

#### 17. Firmware upgrade

The device's firmware can be upgraded through the app. During the upgrade process, the main unit must be in the charging station or have a battery power more than 30%. It is not allowed to start cleaning during the upgrade process.



#### Caution

1. It is recommended to place the main unit in the charging position of the charging station before starting cleaning;
2. Before using the product, arrange the desks, chairs, household items, floor objects, etc. neatly, and clear power cords and small items laying on the ground to avoid the product being blocked during cleaning;
3. Do not stand in front of the device while it is operating to avoid obstructing the device from identifying the area to be cleaned;
4. It is recommended not to turn off the main unit after it has finished working, but to keep it in the charging state for better performance in the next cleaning.

## Indicator status description

Status description of main unit indicator

Indicator status	Performance description
Solid white	Power-on finished/Working/Charging finished/Standby
Flashing white	Recharge/Connecting to network/Firmware upgrading
Breathing light in white	Powering on/Charging (100% > battery power ≥ 20%)
Solid yellow	Not connected to network
Flashing yellow	Resetting Wi-Fi/Abnormal state
Breathing light in yellow	Charging ( battery power < 20%)
Light off	Power off/Sleeping/Do-Not-Disturb mode




## Device disassembly and cleaning

Please perform the following cleaning steps when the power is off!

### Disassembly and cleaning of rolling brush components

#### Step 1: Disassemble the rolling brush

Turn the main unit over, lift the buckle and take out the rolling brush cover, and then take out the rolling brush;

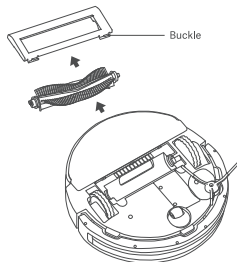

#### Step 2: Clean the rolling brush

Use a cleaning brush to pick up and cut off the hair and fibre attached to the rolling brush, separate them from the rolling brush, and clean the surface dirt. It is recommended to replace the rolling brush every 6-12 months.




### Caution

1. Turn off the power before replacing the rolling brush;
2. The cleaning brush has sharp blades used to cut through tangled debris that is difficult to clean. Keep the cleaning brush out of reach of children.

## Disassembly and cleaning of side brush

### Step 1: Disassemble the side brush

Turn the main unit over, use a screwdriver to remove the screws, and take out the side brush;

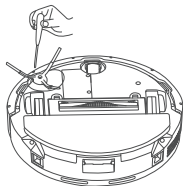

### Step 2: Clean the side brush

Use a cleaning brush to pick up and cut off the hair and fibre attached to the side brush, separate them from the side brush, and clean the surface dirt. It is recommended to replace the side brush every 3-6 months.




### Caution

1. Please replace the side brush with an original one to avoid damaging the main unit due to product differences;
2. Please be careful when using a screwdriver to replace the side brush to avoid scratching yourself.

## Disassembly and cleaning of the two-in-one water tank and filter


### Step 1: Disassemble the two-in-one water tank

Press the release button on the two-in-one water tank to take the water tank out;

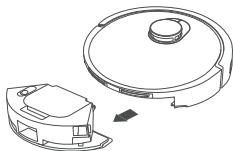


### Step 2: Dump the rubbish in the two-in-one water tank

Open the cover of the two-in-one water tank dust bin and dump the rubbish. Use a cleaning brush to clean the dust bin;

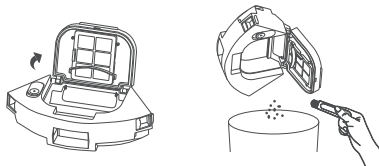


### Step 3: Disassemble the filter

Take out the filter holder, remove the filter, and clean it with a cleaning brush;

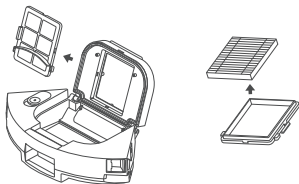


### Step 4: Clean the filter

Rinse the filter with clean water and allow it to air dry before using it again to prevent dust clumping;



### Step 5: Clean the two-in-one water tank

Rinse the two-in-one water tank dust bin with clean water and allow it to air dry for 24 hours before using it again to prevent dust clumping.

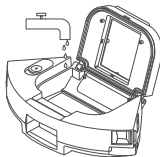


### Caution

1. Do not flush or soak the two-in-one water tank while cleaning the two-in-one water tank dust bin;
2. It is recommended to replace the filter with an original one every 3-6 months to ensure cleanliness.

## Disassembly and cleaning of mop

### Step 1: Remove the mop

Remove the mopping module from the two-in-one water tank and take the mop off the mop holder;

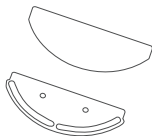

### Step 2: Clean the mop

Rinse the mop with clean water and allow it to air dry before using it again to prevent dust clumping.




Caution

1. Please replace the mop with an original one to avoid affecting the cleaning effect due to product differences;
2. It is recommended to replace the mop with an original one every 3-6 months to ensure cleanliness.

## Cleaning of components

### Step 1: Clean sensors in the main unit

Use a soft and clean cloth to wipe the laser distance sensor, infrared lens, charging electrode plates, and cliff sensors of the main unit;

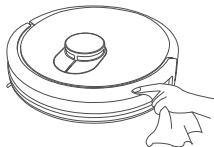


Caution

1. Do not use wet wipes, detergents, sprays, or other chemical products to clean the sensors, infrared recharging sensors, or charging electrode plates of the main unit;
2. Please be careful when using a screwdriver to replace components to avoid scratching yourself.

### Step 2: Clean the omni wheel

Turn the device over and use a screwdriver to remove the omni wheel, and clean the hair and dirt on the wheel.

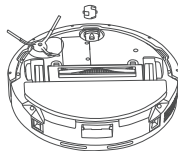

## Troubleshooting

Malfunction prompt	Solution
Please ensure that the laser distance sensor is unobstructed before starting	Please check whether the laser distance sensor is blocked or obstructed by foreign objects. Remove obstacles or foreign objects.
	Please do not use the main unit outdoors under direct sunlight or in strong light. Move the main unit indoors to use it.
	If the above methods are ineffective, move the main unit to a new location to start.
	If there is still an abnormal prompt, please contact our after-sales service centre.
Please place the main unit on a level surface before starting	If the wheels are suspended, please move the main unit to a new location before starting.
Low battery power, please charge the device	The battery power is low, and the main unit cannot start normally. Please charge the main unit before use.
Please ensure that the two-in-one water tank is installed properly	Please put the two-in-one water tank back and ensure that it is installed properly.
Please wipe the cliff sensors and move the main unit to a new location before starting	If the main unit is suspended, please move the main unit to a new location before starting.
	The cliff sensors are too dirty and are blocked by dust or other debris. Please wipe the cliff sensors.
Please check the collision sensors for foreign objects and clear them	Please check if the collision sensors are stuck and clear any foreign objects around them.
	If there is no foreign object, please move the main unit to a new location before starting.
	If there is still an abnormal prompt, please contact our after-sales service centre.
Please put the main unit back in the charging station	If the main unit fails to return to the charging seat to recharge, please put the main unit back in the charging station.
Please clear obstacles around the main unit and try again	Please check if the main unit is stuck or trapped by any obstacles and clear the obstacles around it.
Low battery power. Please wait for the charging to finish	The main unit has a low battery power and is charging in the charging station. Please wait for the charging to finish before restarting.
Please ensure that the mop is installed properly	Please put the mop back and ensure that the mop holder is properly installed.
The main unit has shut down due to a low battery power	The main unit will automatically shut down when its voltage is lower than 12 V. Please put the main unit back in the charging station for charging.
The side brush malfunctions. Please check and clear the side brush	Please check if the side brush is tangled with any foreign objects and clear it.
The wheels malfunction. Please check and clear the wheels	Please check if the wheels are stuck and clear any foreign objects.

Malfunction prompt	Solution
The <b>rolling brush malfunctions</b> . Please check and <b>clear the rolling brush</b>	Please check if the <b>rolling brush is tangled</b> with any foreign objects and <b>clear it</b> .
A <b>virtual wall or no-go area is detected</b> . Please move the main unit away from this area	Please restart the main unit after moving it away from the <b>virtual wall or no-go area</b> .

Tip: Some anomalies can be eliminated by resetting the system.

## FAQs

Malfunction type	Solution
Fail to power on	The battery power is <b>low</b> . Please put the main unit back in the charging station for charging before use.
Fail to charge	The charging station is not powered on. Please make sure the power supply is connected. The charging <b>electrode plates</b> are not in good contact. Please <b>clean the charging pins</b> of the charging station and the charging <b>electrode plates</b> of the main unit. The ambient temperature is too <b>low</b> (below 0°C) or too <b>high</b> (above 35°C).
Fail to return to the charging station to recharge	There are too many <b>obstacles</b> near the charging station. Please <b>place</b> the charging station in an open area. The distance between the main unit and the charging station is too far. Please <b>place</b> the main unit near the charging station and try again.
Abnormal operation	Please turn off the robot and restart it.
Abnormal noise during <b>cleaning</b>	The <b>rolling brush, side brush, wheels, or omni wheel</b> may be entangled with foreign objects. Please turn off the robot and <b>clear it</b> .
Reduced <b>cleaning capability</b> or dust <b>collection capability</b>	The two-in-one water tank dust bin is <b>full</b> . Please <b>clear the dust bin</b> . The <b>filter is blocked</b> , and please <b>clean it</b> . The <b>rolling brush is entangled</b> with foreign objects, and please <b>clean it</b> .
The mopping module does not <b>release water</b> , or the amount of water <b>released is small</b>	Please check if there is water in the water tank; please use the <b>mobile app</b> to adjust the water <b>volume</b> to the maximum <b>level</b> ; please <b>install the mop and mop holder properly</b> according to the manual.
Fail to connect to Wi-Fi	The Wi-Fi function is not activated. Please reset the Wi-Fi and try again.
	The Wi-Fi signal is weak. Please reset the main unit in an area with a strong Wi-Fi signal.
	The Wi-Fi connection is abnormal. Reset the Wi-Fi, download the <b>latest mobile app</b> , and try to connect again.
Main unit in offline status	Please ensure that the main unit has been <b>successfully</b> connected to the network and <b>always stays</b> in the Wi-Fi signal-covered area.
Fail to perform <b>scheduled cleaning</b>	Please make sure the main unit is not in the Do-Not-Disturb Mode because the <b>scheduled cleaning</b> cannot be executed in this mode. Please make sure the main unit is connected to the network. Otherwise, the <b>scheduled cleaning will not start</b> because the main unit cannot synchronise the time.

Malfunction type	Solution
Fail to perform resume cleaning	Please ensure that the main unit is not in the Do-Not-Disturb Mode, which does not allow resume cleaning. In addition, if you make the main unit return to recharge by the app, press the recharge button, or move it back to the charging station directly, the main unit will not resume cleaning.
Do I need to charge the main unit for 16 hours for the first 3 uses?	The lithium battery has no memory effect and can be charged as needed without waiting for an additional period before use.

## Technical data

Product name	Robot vacuum and mop combo	Product model	Lidar Robot
Rated voltage	14.4 V	Rated power	40 W
Battery capacity	2600 mAh	Rated input	20 V=0.6 A
Net weight	Approx. 2.8 kg	Product dimension	325 × 325 × 100 mm
Dust bin capacity	Approx. 260 ml	Noise (quiet level/standard level/strong level/max level)	≤ 72 dB (A)
Water tank capacity	Approx. 290 ml	Battery type	Lithium-ion rechargeable battery

## Disposal

### Correct disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

## Warranty and limitations of liability

This product is guaranteed for a period of 24 months (defined by local law) from the date of purchase against any failure resulting from manufacturing or material defects. This warranty does not cover damage caused by improper installation, improper use, or normal wear and tear of the product.

More specifically, the warranty does not cover:

- Side brush, filter, mop, rolling brush and rolling brush cover are not covered by the warranty as they are consumable items;
- Damage or problems caused by improper use, accident, alteration or electrical connection of improper intensity or voltage;
- Modified products, those whose warranty seal or serial number have been damaged, altered, removed or oxidized;
- Failure of the battery due to overcharging or failure to observe the safety instructions explained in the instruction manual;
- Cosmetic damage, including scratches, dents, or any other element;
- Damage caused by any intervention carried out by an unauthorised person;
- Defects caused by normal wear and tear or due to normal ageing of the product;
- Software updates due to a change in network settings;
- Product failures due to the use of third party software to modify, change or adapt the existing software;
- Product failures caused by use without accessories approved by the manufacturer.
- Oxidised products.

Terms and conditions of implementation:

To obtain a warranty service, you are requested to return your product to the customer service desk of your retail outlet with your proof of purchase (receipt, invoice, ...), the product and its supplied accessories, with its original packaging.

It is important to have the date of purchase, the model and the serial or IMEI number on hand as information (this information usually appears on the product, the packaging or your proof of purchase). Failing this, you must return the product with the accessories necessary for its proper operation (power supply, adaptor, etc.).

In the event that your claim is covered by the warranty, the after-sales service may, within the limits of local law, either:

- Repair or replace defective parts;
- Exchange the returned product with a product that has at least the same functionality and that is equivalent in terms of performance;
- Refund the product at the purchase price of the product mentioned on the proof of purchase.

If one of these 3 solutions is used, this does not give rise to the extension or renewal of the warranty period.



Marking for the restriction of the use of hazardous substances



## Customer Service

Please contact us if you need any help as following:

- Technical Support
- Package is NOT in perfect condition
- Parts missing
- Any other quality issues

**If the above problem occurs look at the bottom of the robot**

**EC REP** CET PRODUCT SERVICE SP. Z O.O.  
33 Długa Street, Apt. 102 Zgierz Łódzkie PL(Poland)  
Email: [info@cetproduct.com](mailto:info@cetproduct.com)

**UK REP** GSG CONSULTING GROUP LIMITED  
Montague houses unit 3 Matthew street Manchester m12 5bb  
Email: [GSG--GROUP@outlook.com](mailto:GSG--GROUP@outlook.com)



MADE IN CHINA